

Yealink | 亿联网络



T3 Series IP Phones User Guide

Version: 86.5 | Date: Mar. 2021

Table of Contents

Table of Contents	1
Before You Begin	8
Related Documentation	8
Summary of Changes	8
Changes for Release V86, Guide Version V86.5	8
Getting Started	10
Hardware Overview	10
T33P/T33G Hardware	10
T31P/T31G/T31/T30P/T30 Hardware	12
Power LED Indicator	13
Line Key LED	13
Screen and Icons	14
Idle Screen	14
Calls Screen	15
Icons in the Status Bar	16
T33P/T33G Icons in the Status Bar	16
T31P/T31G/T31/T30P/T30 Icons in the Status Bar	16
Line Key Icons	17
T33P/T33G Line Key Icons	17
T31P/T31G/T31/T30P/T30 Line Key Icons	18
Entering Characters	18
Call Features	19
Changing the Default Account	19
Placing Calls	19
Placing a Call from the Dialer	19
Placing Multiple Calls	20
Placing a Call with a Speed Dial Key	20
Placing a Call Back to the Last Incoming Number	21
Redialing a Number	21
Dialing a Hotline Number	21
Placing an International Call	21
Placing a Call from the Call History	22
Placing a Call from the Directory	22
Placing an Anonymous Call	22
Placing Calls to Google Contacts	23
Placing an Emergency Call from a Locked Phone	23
Answering Calls	23
Answering a Call	23
Answering a Call When in a Call	24
Answering a Call Automatically	24

Switching Among the Handset, Speakerphone and Headset Modes	24
Disabling Call Waiting	24
Silencing or Rejecting Incoming Calls	25
Silencing a Call	25
Rejecting a Call Manually	25
Rejecting Anonymous Calls	25
Rejecting Calls with Do Not Disturb (DND)	26
Rejecting Calls with DND on All Lines	26
Rejecting Calls with DND on a Specific Line	26
Deactivating DND	27
Ending Calls	27
Redialing a Call Automatically	27
Muting/Unmuting Audio	28
Keep Mute	28
Holding and Resuming Calls	28
Holding a Call	29
Resuming a Held Call	29
Redirecting Incoming Calls	29
Forwarding All Incoming Calls to a Contact	29
Forwarding All Incoming Calls on All Lines	29
Forwarding All Incoming Calls on a Specific Line	30
Deactivating Call Forward	30
Forwarding an Incoming Call Manually	31
Forwarding Incoming Calls with a Forward Key	31
Diverting Calls to a Contact	31
Transferring Calls	31
Performing a Blind Transfer	32
Performing a Semi-Attended/Attended Transfer	32
Performing Transfer with a Transfer Key	32
Setting a Transfer Key	33
Performing a Blind Transfer Using a Transfer Key	33
Performing a Semi-attended/Attended Using a Transfer Key	33
Performing a Call Transfer by Selecting a Transfer Mode	33
Conference Calls	34
Local Conference	34
Setting Up a Local Conference Call	35
Merging Two Calls into a Conference	35
Inviting a Transfer Target and a Transferee into a Conference	35
Holding or Resuming a Conference Call	35
Muting or Unmuting a Conference Call	35
Splitting a Conference Call	35
Managing Conference Participants	35
Ending a Conference Call	36
Network Conference	36

Setting Up a Network Conference	36
Multicast Paging	36
Sending Multicast Paging	37
Setting a Multicast Paging Key	37
Sending a Paging by a Multicast Paging Key	38
Setting a Paging List Key	38
Setting a Paging Group	38
Sending Pages by a Paging List Key	39
Deleting a Paging Group	39
Receiving Multicast Paging	39
Managing a Paging Call	39
Advanced Call Features	41
Using Call Completion	41
Call Pickup	42
Picking up a Call Directly	42
Picking up a Group Call Directly	42
Picking up a Call with a Pick Up Key	43
Picking up a Call with a Group Pickup Key	43
Call Park and Call Retrieve	44
Parking or Retrieving a Call in the FAC Mode	44
Parking a Call in the FAC Mode	44
Retrieving a Parked Call in the FAC Mode	45
Parking or Retrieving a Call in the Transfer Mode	45
Parking a Call in the Transfer Mode	45
Retrieving a Parked Call in the Transfer Mode	45
Parking or Retrieving a Call with a Park or Retrieve Key	46
State Indicator of the Park/Retrieve key	46
Parking a Call using a Park Key	46
Retrieving a Parked Call using a Retrieve Key	47
Busy Lamp Field (BLF)	47
State Indicator of Remote Line by BLF Key	47
Audio Alert for BLF Pickup	48
Setting an Alert Tone for Monitored Lines	48
Visual Alert for BLF Pickup	48
Setting a BLF Key	48
Picking up a Remote Call by BLF Key	49
Transferring a Call by BLF Key	49
Performing a Blind Transfer	50
Performing a Semi-attended/Attended Transfer	50
Parking or Retrieving a Call by BLF Key	50
Parking a Call to a Monitored Line	50
Retrieving a Parked Call	50
BLF List	51
State Indicator of Remote Line by BLF List Key	51

Audio Alert for BLF Pickup	51
Setting an Alert Tone for Monitored Lines	51
Visual Alert for BLF Pickup	52
Ring Type for BLF Parked Call Monitor	52
Setting an Alert Tone for the BLF Parked Call Monitor	52
Visual Alert for BLF Parked Call Monitor	52
Picking up a Remote Call by BLF List Key	53
Transferring a Call by BLF List Key	53
Performing a Blind Transfer	53
Performing a Semi-attended/Attended Transfer	53
Parking a Call by a BLF List Key	54
Retrieving a Call by a BLF List Key	54
Barging in an Active Call by BLF List Key	54
Retrieving a Call Parked to the Monitored Line	54
Shared Line	55
State Indicator of Shared Line	55
Placing Calls on a Shared Line	56
Answering Calls on a Shared Line	56
Placing a Call on Public Hold	56
Placing a Call on Private Hold	56
Retrieving a Held Call on a Shared Line	57
Barging in an Active Call on a Shared Line	57
Pulling a Shared Call on a Shared Line	57
Intercom	57
State Indicator of the Intercom key	58
Placing an Intercom Call	58
Picking up an Incoming Call of the Target Extension	58
Answering an Intercom Call	59
Short Message Service (SMS)	60
Reading a Text Message	60
Sending a Text Message	60
Replying to a Text Message	60
Deleting a Text Message	61
Voice Mail	61
Setting the Voice Mail Code	61
Leaving Voice Mails	61
Listening to Voice Mails	61
Using the Hot Desking	62
Automatic Call Distribution (ACD)	62
State Indicator of ACD User	62
Logging into the ACD System	63
Changing the ACD Status	63
Directory	64
Local Directory	64

Managing the Local Directory Groups	64
Adding Contact Groups	64
Editing Contact Groups	64
Deleting Contact Groups	65
Managing the Local Directory Contacts	65
Adding Contacts	65
Viewing Contacts	65
Editing Contacts	65
Deleting a Contact	66
Deleting All Contacts	66
Moving a Local Directory Contact to Blacklist	66
Searching for Contacts	66
Favorites	66
Adding Favorites	67
Adding an Existing Contact to Your Favorites	67
Adding a New Contact to Your Favorites	67
Viewing Favorites	67
Reordering Favorites	67
Deleting Favorites	68
Blacklist	68
Adding a Blacklist Contact	68
Viewing Blacklist Contacts	68
Editing a Blacklist Contact	68
Deleting Blacklist Contacts	69
Deleting a Blacklist Contact	69
Deleting All Blacklist Contacts	69
Moving a Blacklist Contact to the Local Directory	69
Google Contacts	69
Viewing Google Contacts	69
Updating Google Contacts	70
Searching for Google Contacts	70
Remote Phone Book	70
Searching for Remote Phone Book Contacts	70
Viewing Remote Phone Book Contacts	70
Saving a Remote Phone Book Contact to the Local Directory	70
Saving a Remote Phone Book Contact to the Blacklist	71
Call History	72
Call History Icons	72
Viewing History Records	72
Saving a History Record to Local Directory	72
Saving a History Record to Blacklist	73
Deleting History Records	73
Deleting a Call Record	73
Deleting All Call Records	73

Disabling History Record	73
Customizing Your Phone	74
Changing the Administrator Password	74
Wallpaper	74
Changing Wallpaper on Idle Screen	74
Screen Saver	75
Changing the Waiting Time for Screen Saver	75
Disabling Time & Date and Status Icons Display	75
Setting the Screen Saver Type	75
Changing the Backlight and Time	76
Adjusting the Screen Contrast	76
Changing the Language	77
Time & Date	77
Setting the Time and Date Manually	77
Changing the Time and Date Format	77
Setting a Key as Send	78
Customizing the Soft Keys	78
Phone Lock	78
Setting the Phone Lock	78
Locking Your Phone Manually	79
Unlocking Your Phone	79
Changing Your Phone Unlock PIN	79
Extending the Line Key Labels	80
Locking the Line Key	80
Audio Settings	82
Adjusting the Volume	82
Setting the Ring Tone	82
Setting a Ring Tone for the Phone	82
Setting a Ring Tone for an Account	82
Setting a Ring Tone for a Group	83
Setting a Ring Tone for a Contact	83
Disabling the Key Tone	83
Muting the Ringtone	83
Maintaining Your Phone	84
Warnings	84
Investigating Warnings	84
Re-provisioning Your Phone	84
Clearing Warnings	85
Diagnosing the Network	85
Rebooting Your Phone	85
Resetting to Factory Settings	85
Updating the Phone Configuration	86
Clearing User's Personalized Configuration Settings	86

Appendix - Menu Structure	87
For the T33P/T33G Phone	87
For the T31P/T31G/T31/T30P/T30 Phone	88

Before You Begin

This guide provides information you need to quickly use your new phone.

Firstly, verify with your system administrator that the IP network is ready for phone configuration. Also, be sure to read the Quick Start Guide which can be found in your phone package before you set up and use the phone. As you read this guide, keep in mind that some features are only configurable by your system administrator or determined by your phone environment. As a result, some features may not be enabled or may be operated differently on your phone. Additionally, the examples and graphics in this guide may not directly reflect what is displayed or is available on your phone screen.

Note: This guide mainly takes T31P phones as an example.

This user guide contains information for the following Yealink products:

- T33P IP phones
- T33G IP phones
- T31P IP phones
- T31G IP phones
- T31 IP phones
- T30P IP phones
- T30 IP phones

Related Documentation

You can view more types of documents to make the phone to perform more functions.

You can obtain additional information on the following phones from Yealink Support:

- [Classic IP Phone T33P](#)
- [Classic IP Phone T33G](#)
- [Classic IP Phone T31P](#)
- [Classic IP Phone T31G](#)
- [Classic IP Phone T31](#)
- [Classic IP Phone T30P](#)
- [Classic IP Phone T30](#)

The following types of related documents are available on each support page on [Yealink support page](#):

- Release Notes, which details bug fixes and feature enhancements when an update is released.
- Quick Start Guide, which describes how to assemble your phone and configure the basic phone features.
- Administrator Guide, which provides detailed information on how to configure phone features for the system administrator.
- Regulatory Notice, which provides information about all regulatory and safety guidance.

You can also view other user documents which provide descriptions and examples for phone settings and features on the [Yealink support page](#).

Summary of Changes

This section describes the changes to this guide for each release and guide version.

Changes for Release V86, Guide Version V86.5

The following sections are new for this version:

- [Muting the Ringtone](#)

Major updates have occurred to the following sections:

- [Placing an Anonymous Call](#)

*You can select **All On** to turn on local anonymous for all lines.*

Getting Started

Before you use your phone, take some time to get familiar with its features and user interface.

The terms "the phone" and "your phone" refer to any of the IP phones.

Topics

[Hardware Overview](#)
[Screen and Icons](#)
[Entering Characters](#)


Hardware Overview

Understanding the phone hardware helps you easily use the phone's features.

Topics

[T33P/T33G Hardware](#)
[T31P/T31G/T31/T30P/T30 Hardware](#)
[Power LED Indicator](#)
[Line Key LED](#)


T33P/T33G Hardware

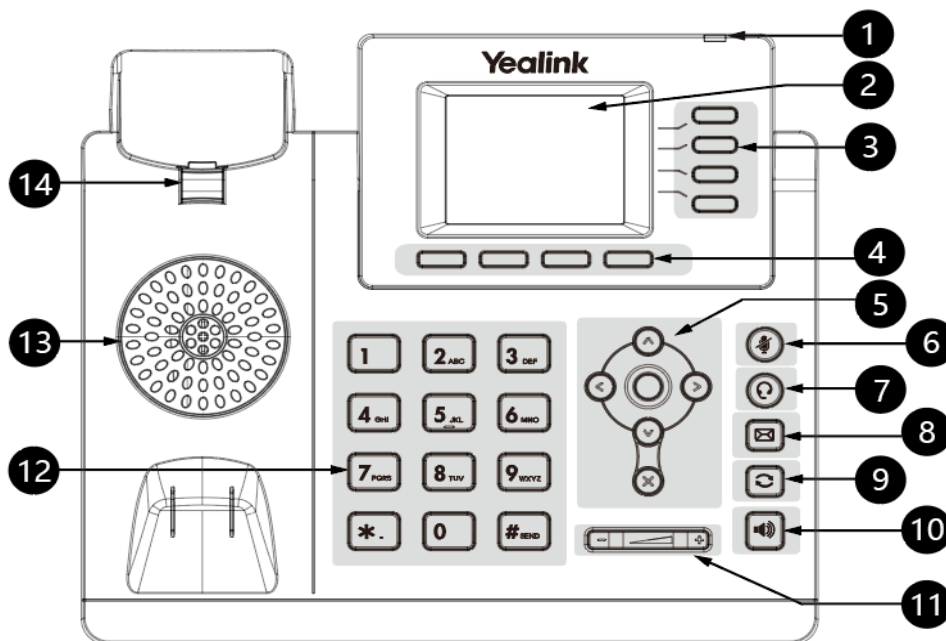

NO.	Item	Description
1	Power LED Indicator	Indicates call status, message status and phone's system status.
2	Phone Screen	Shows information about your phone, such as calls, messages, soft keys, time and date.
3	Line Keys	Access your phone lines and features.
4	Soft Keys	Access the function displayed on the screen above the soft keys. The soft keys

NO.	Item	Description
		change depending on what you are doing at the time.
5	Navigation Keys	<ul style="list-style-type: none"> • Scroll through information or options displayed on the screen. • Access History and Directory respectively.
	OK Key	Confirms actions or answers incoming calls.
	Cancel Key	Cancels actions or rejects incoming calls.
6	MUTE Key	Toggles the microphone on or off.
7	HEADSET Key	Toggles the headset mode on or off.
8	MESSAGE Key	Accesses your voice messages.
9	REDIAL Key	Redials a previously dialed number.
10	Speakerphone Key	Toggles the speakerphone (hands-free) mode or not.
11	Volume Key	Adjust the volume of handset, headset, speaker.
12	Keypad keys	Allow you to enter numbers, letters, and special characters. If a menu item has an index number, you can use the keypad key to select the item.
13	Speaker	Provides ringer and speakerphone audio output.
14	Reversible Tab	Secures the handset in the handset cradle when the phone is mounted vertically.

T31P/T31G/T31/T30P/T30 Hardware

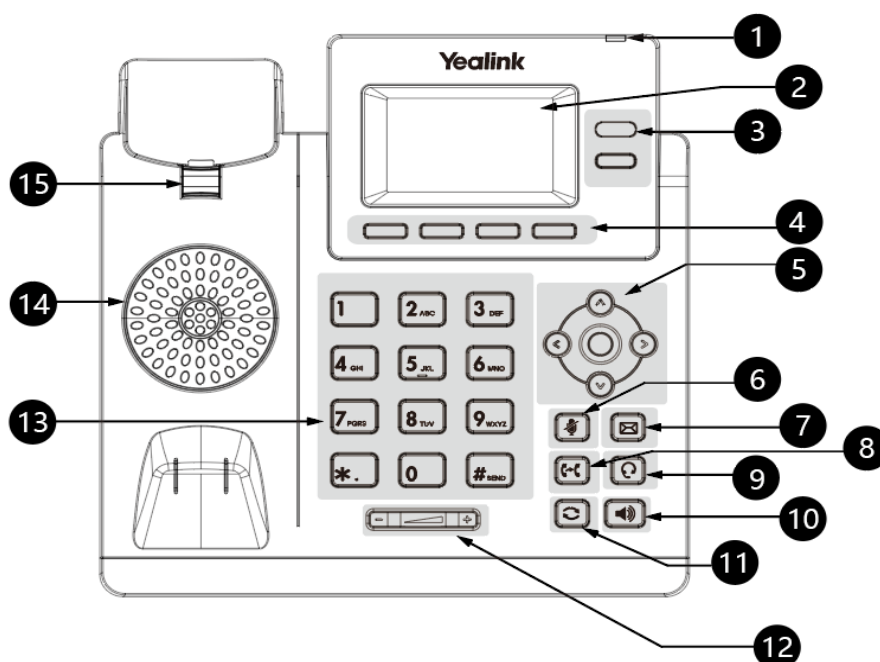

NO.	Item	Description
1	Power LED Indicator	Indicates call status, message status and phone's system status.
2	Phone Screen	Shows information about your phone, such as calls, messages, soft keys, time and date.
3	Line Keys	Access your phone lines and features. The T30P/T30 phone does not have Line keys.
4	Soft Keys	Access the function displayed on the screen above the soft keys. The soft keys change depending on what you are doing at the time.
5	Navigation Keys	<ul style="list-style-type: none"> • Scroll through information or options displayed on the screen. • Access History and Directory respectively.
	OK Key	Confirms actions or answers incoming calls.
6	MUTE Key	Toggles the microphone on or off.
7	MESSAGE Key	Accesses your voice messages.
8	TRAN Key	Transfers a call.
9	HEADSET Key	Toggles the headset mode on or off.
10	Speakerphone Key	Toggles the speakerphone (hands-free) mode or not.
11	REDIAL Key	Redials a previously dialed number.

NO.	Item	Description
12	Volume Key	Adjust the volume of handset, headset, speaker.
13	Keypad keys	Allow you to enter numbers, letters, and special characters. If a menu item has an index number, you can use the keypad key to select the item.
14	Speaker	Provides ringer and speakerphone audio output.
15	Reversible Tab	Secures the handset in the handset cradle when the phone is mounted vertically.

Power LED Indicator

The power LED indicator indicates the call, message and phone's system status.

LED Status	Description
Solid red	The phone is initializing.
Fast-flashing red (0.3s)	The phone is ringing.
Slowly-flashing red (1s)	The phone receives a voice mail or text message.
Solid red for 0.5s and off for 3s alternately	The phone enters the power-saving mode. It is only available on the T33P/T33G phones.

Note: The above introduces the default LED status. Your system administrator can configure the status of the power LED indicator.

Line Key LED

The line key LED indicators are associated with the status of phone lines and features. It is not available on T30P/T30 phones.

Line key LED (associated with the phone line)

LED Status	Description
Solid green	The line is seized. The line is in conversation.
Fast-flashing green	The line receives an incoming call.
Slowly-flashing green	The call is placed on hold.
Off	The line is inactive.

Line key LED (configured as a page switch key)

LED Status	Description
Solid red	There is a call parked on the line, and the line key is not on the current page.
Fast-flashing green	The line receives an incoming call, and the line key is not on the current

LED Status	Description
	page.
Fast-flashing red	The monitored user whose line key is not on the current page receives an incoming call.
Off	The line keys are idle.

Screen and Icons


The user screens and icon indicators can help you navigate and understand the important information on the phone's status.


Topics

- [Idle Screen](#)
- [Calls Screen](#)
- [Icons in the Status Bar](#)
- [Line Key Icons](#)

Idle Screen

The idle screen is made up of the status bar, line keys, and soft keys. The time & date is displayed in the middle of the screen.

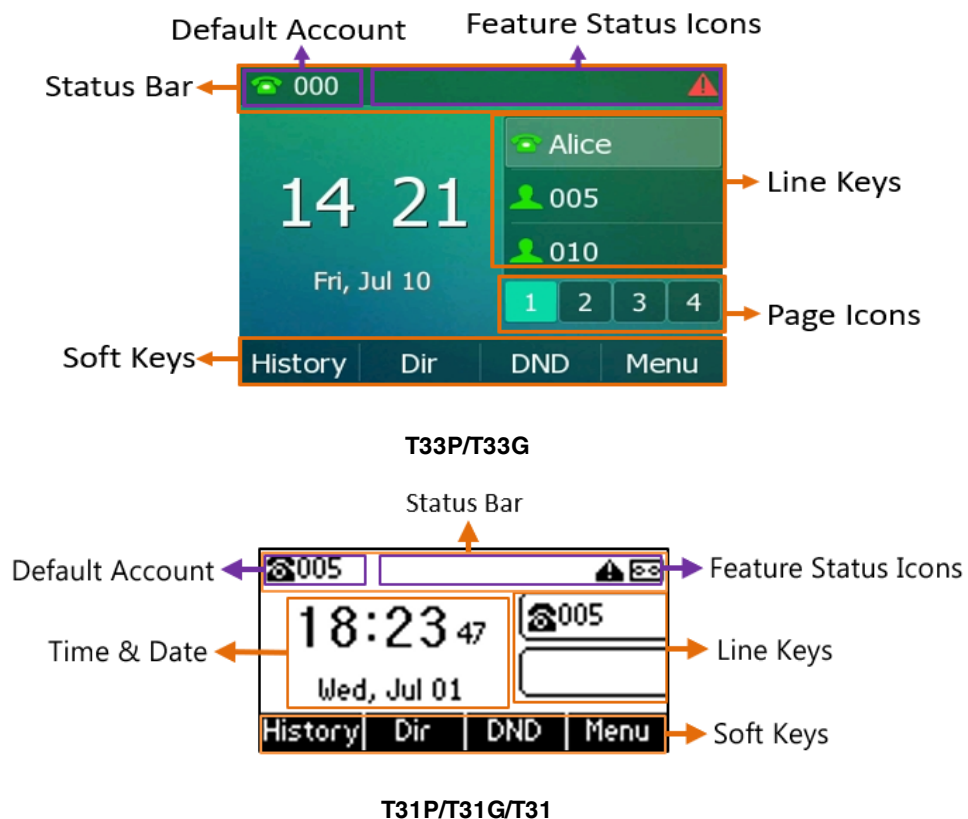

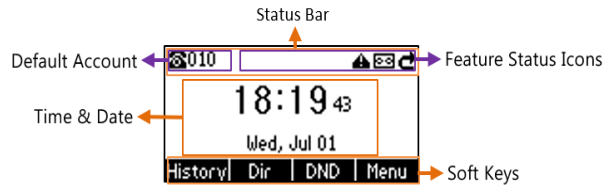

T30P/T30

- **Status Bar:** Display the default account, feature status icons, and the time. The status icons are displayed when features are activated.
- **Line Keys:** Display the information associated with the line keys and feature keys on the phone.
- **Page Icons:** The page icons appear only when you assign functionality to line key located in line key 5-12 on the T33P/T33G phones.
- **Soft Keys:** Each soft key label indicates the action for the soft key below the screen.


Related Topics

- [Icons in the Status Bar](#)
- [Changing the Default Account](#)
- [Customizing the Soft Keys](#)

Calls Screen

All of your active and held calls are displayed on the calls screen. You can press up or down navigation key to switch among calls.

For T33P/T33G, the calls screen can display the local name or number. Check with your system administrator to find out if this feature is available on the phone. When there is an active call and a held call, the calls screen is shown below:

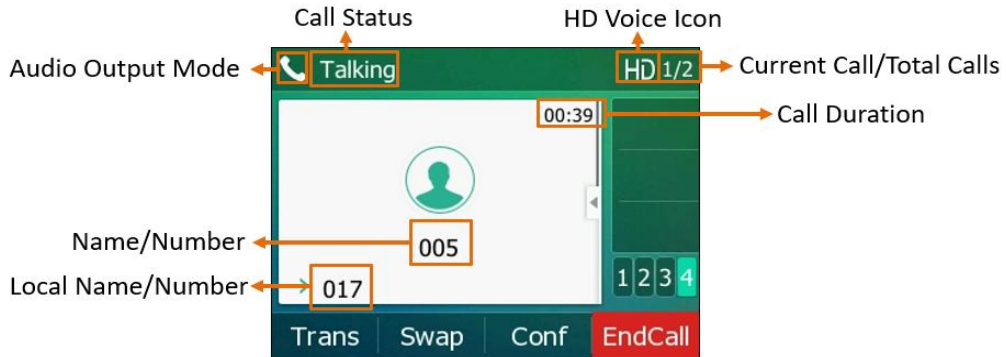

During a call, you can press the OK key to view the current time & date and phone status. The phone screen is shown below:

Status	
1. Time & Date:	10:26 Mon, Jul 06
2. IPv4:	10.81.6.37
3. MAC:	80:5E:C0:BD:2B:7E
4. Firmware:	124.85.0.10
Back	

Icons in the Status Bar


















The icons in the status bar help you easily get the current phone status, such as call and message status. Icons in the status bar vary by phone models.

Topics



[T33P/T33G Icons in the Status Bar](#)









 



 
[T31P/T31G/T31/T30P/T30 Icons in the Status Bar](#)

T33P/T33G Icons in the Status Bar

Icons	Description	Icons	Description
	Wired network is unavailable		Phone Lock
	Wired network is unreachable		Missed Calls
	Speakerphone (hands-free) mode		Always Forward
	Busy Forward		No Answer Forward
	Handset mode		Do Not Disturb (DND)
	Headset mode		Phone Warning
	Voice Mail		Keep Mute
	Text Message		Silent Mode
	Auto Answer		

T31P/T31G/T31/T30P/T30 Icons in the Status Bar

Icons	Description	Icons	Description
	Wired network is unavailable		Do Not Disturb (DND)

Icons	Description	Icons	Description
	Wired network is unreachable		Phone Warning
	Speakerphone (hands-free) mode		Keep Mute
	Handset mode		Ringer volume is 0
	Headset mode		Phone Lock
	Voice Mail		Missed Calls
	Text Message		Call Forward
	Auto Answer		

Line Key Icons

By viewing the line key icons, you can easily get the function of the line key. Icons in the line keys vary by phone models.

















Topics

[T33P/T33G Line Key Icons](#)







[T31P/T31G/T31/T30P/T30 Line Key Icons](#)

T33P/T33G Line Key Icons

Icon indicators (associated with line key features)







Icons	Description	Icons	Description
	Hold		DND
	Voice Mail		SMS
	Direct Pickup		Group Pickup
	Conference		Forward
	Transfer		Recall
	Record		Recording in process (Record)
	Multicast Paging Paging List		Hot Desking
	Phone Lock		Directory
	Speed Dial		

Icon indicators (associated with line)

Icons	Description	Icons	Description
	The private line registers successfully.		The shared/bridged line registers successfully.
	Registering.		Register failed.
	DND is enabled on this line.		Call forward is enabled on this line.

T31P/T31G/T31/T30P/T30 Line Key Icons

Icon indicators (associated with line)

Icons	Description	Icons	Description
	The private line is registered successfully.		The shared/bridged line is registered successfully.
	Register failed.		Registering.
	DND is enabled on this line.		Call forward is enabled on this line.

Entering Characters

You can use the keypad keys on your phone to enter or update field information.

The following table describes how to enter different characters using the keypad keys.

Task	Action
Switch input modes	Press the ABC , abc , Abc , 2aB , or 123 soft key to switch the input modes.
Enter alphas	Select ABC , abc , 2aB , or Abc mode. Press a keypad key repeatedly to view the character options and stop when the letter you want to enter is displayed in the field. Wait one second, and then enter the next letter.
Enter numbers	Select 123 mode, press the corresponding keys.
Enter special characters	Select ABC , abc , 2aB , or Abc mode, press * key or # key one or more times to enter one of the following special characters: * key: * , ' ? ! \ - () @ / : _ ; + & % = < > £ \$ ¥ ¢ [] { } ~ ^ ¡ ¢ § # " # key: # In 123 mode, you can press the * key to choose the following special characters: . * : / @ [] .
Insert space	Select ABC , abc , 2aB , or Abc mode, press the 0 key.
Move cursor	Press the left or right navigation key to position the cursor.
Delete one or more characters	Position the cursor to the right of the character, and select the Delete soft key.

Call Features

You can use the phone to place and answer calls, ignore incoming calls, transfer a call to someone else, conduct a conference call and perform other basic call features.

Topics

- [Changing the Default Account](#)
- [Placing Calls](#)
- [Answering Calls](#)
- [Switching Among the Handset, Speakerphone and Headset Modes](#)
- [Disabling Call Waiting](#)
- [Silencing or Rejecting Incoming Calls](#)
- [Ending Calls](#)
- [Redialing a Call Automatically](#)
- [Muting/Unmuting Audio](#)
- [Keep Mute](#)
- [Holding and Resuming Calls](#)
- [Redirecting Incoming Calls](#)
- [Transferring Calls](#)
- [Conference Calls](#)
- [Multicast Paging](#)

Changing the Default Account

If there are multiple registered accounts on the phone, you can place a call with the default account by default.

It is not available on the T30P/T30 phones.

Procedure

1. On the idle screen, press the left or right navigation key.

Placing Calls

You can use your phone like a regular phone to place calls in many ways easily.

Topics

- [Placing a Call from the Dialer](#)
- [Placing Multiple Calls](#)
- [Placing a Call with a Speed Dial Key](#)
- [Placing a Call Back to the Last Incoming Number](#)
- [Redialing a Number](#)
- [Dialing a Hotline Number](#)
- [Placing an International Call](#)
- [Placing a Call from the Call History](#)
- [Placing a Call from the Directory](#)
- [Placing an Anonymous Call](#)
- [Placing Calls to Google Contacts](#)
- [Placing an Emergency Call from a Locked Phone](#)

Placing a Call from the Dialer

The Dialer enables you to enter a number to place a call, and it displays a list of previously placed calls or contacts in your directory.

You can also select the desired contact from the search list, the placed call list or Directory.

Note: Your system administrator can configure the source list for searching and disable to display the placed call records.

Procedure

1. Do one of the following:
 - Start typing a phone number.
 - Select the desired line key (not supported on the T30P/T30 phones).
 - Pick up the handset, press the Speakerphone key or the HEADSET key.
2. Enter a number or highlight a contact.
3. Select **Send**.

Note: Your system administrator can enable live dialpad feature, which enables your phone to automatically dial out the phone number after a period of time without selecting **Send**.

Related Topic

[Switching Among the Handset, Speakerphone and Headset Modes](#)

Placing Multiple Calls

When you are in a call, you can hold your current call and place a new call.

Procedure

1. Do one of the following:
 - Select a line key (not supported on the T30P/T30 phones). The active call is placed on hold.
 - Select **Hold** to place the original call on hold.
Select **New Call (NewCall)**.
2. Enter the desired number or select a contact.
3. Select **Send**.

Placing a Call with a Speed Dial Key

You can quickly dial a number by using a Speed Dial key.

Before You Begin

If your system administrator has enabled the Favorites feature on the phone, you cannot manually set a Speed Dial key.

If you are using the T30P/T30 phones, contact your system administrator for assistance setting a Speed Dial key for you.

Procedure

1. Go to **Menu > Features > Dsskey**.
2. Select the desired line key.
3. Select **SpeedDial** from the **Type** field.
4. Select the desired line from the **Account ID** field.
5. Do one of the following:
 - (Optional.) Enter the string that will appear on the phone screen in the **Label** field.
Enter the contact number you want to dial out directly in the **Value** field.
You can also enter the contact number with the DTMF sequence that you want to send in the **Value** field. The contact number and DTMF sequence are separated by commas. One comma stands for 500 milliseconds.
For example, **1234,,123#** means the phone dials out the number 1234 first, then after the call is set up for 1 second, it sends the DTMF sequence 123# to the remote party.
 - On the T33P/T33G phones, highlight the **Label** or **Value** field. Select **Directory (Dir)** and select the desired contact from the Directory list.
6. Select **Save**.

Tip: By default, you can long press the desired line key to set it.

When the phone is idle, you can press the Speed Dial key to call a contact quickly. The phone calls a contact using the configured line by default. If you want to call a contact using another line, you can first press the line key, and then press the Speed Dial key.

Note: During a call, you can press the Speed Dial key to select a transfer mode. Check with your system administrator to find out if this feature is available on the phone.

Placing a Call Back to the Last Incoming Number

You can redial the last incoming number quickly by using a Recall key.

Procedure

1. Go to **Menu > Features > Dsskey**.
2. Select the desired line key.
3. Select **Key Event** from the **Type** field.
4. Select **Recall** from the **Key Type** field.
5. (Optional.) Enter the string that will appear on the phone screen in the **Label** field.
6. Select **Save**.


Tip: By default, you can long press the desired line key to set it.

When the phone is idle, press the Recall key to quickly redial the last incoming number.


Redialing a Number

The phone keeps a record of all the placed calls. You can recall the contact you recently called.

Procedure

1. Press the REDIAL key .

*A record of **Placed Calls** is displayed on the phone screen.*
2. Highlight the desired record, select **Send**.

Tip: Press the REDIAL key  twice to recall the contact you called.

Dialing a Hotline Number

When the phone is off-hook, it will dial out the hotline number automatically after the designated delay time.

Procedure

1. Go to **Menu > Features > Hot Line**.
On the T33P/T33G phones, go to **Menu > Features > Others > Hot Line**.
2. Do one of the following:
 - Enter the desired number in the **Hotline Number** field.
 - Press **Directory (Dir)** and select a desired contact from the Directory list.
3. Enter the desired delay time (0-10 seconds) in the **Hotline Delay** field.
4. Select **Save**.

Placing an International Call

You can place calls to international phone numbers on your phone.

Procedure

1. Long press digit key 0 on the phone keypad until the **plus sign (+)** appears.

2. Enter the phone number with the country code.
3. Select **Send**.

Placing a Call from the Call History

You can place calls to contacts from the History list, which contains the calls that were recently placed, answered, missed, or forwarded.

Procedure

1. Press **History** or go to **Menu > History**.
The phone screen displays all call records.
2. Select the desired call list.
3. Highlight a contact and select **Send**.

Placing a Call from the Directory

You can place a call to a contact directly from your directory.

Procedure

1. Select **Directory (Dir)** or go to **Menu > Directory > Local Directory**.
2. Select the desired contact group or **All Contacts**.
3. Highlight the desired contact and select **Send**.
If the selected contact has multiple numbers, highlight the desired number, and select **Send**.

Related Topic

[Searching for Contacts](#)

Placing an Anonymous Call

You can hide your name and number when you place a call. As a result, the callee receives an anonymous call without caller identity.

Before You Begin

Contact your system administrator to find out if this feature is available on your phone, and to get the anonymous call on code or off code if required.

Procedure

1. Go to **Menu > Features > Anonymous Call (Anonymous)**.
2. Select the desired line (not supported on the T30P/T30 phones).
3. Turn on **Local Anonymous**.
4. (Optional.) Select the desired value from the **Send Anonymous Code** field.
5. (Optional.) Enter the anonymous call on code and off code respectively.
6. Select **Save**.
7. Select the anonymous line to place a call.

The callee is prompted with an incoming call from anonymity.

If the callee enables anonymous rejection feature, you may be prompted that the callee does not accept calls from an anonymous number.

Tip: You can select **All On** to turn on local anonymous for all lines.

Related Topic

[Rejecting Anonymous Calls](#)

Placing Calls to Google Contacts

You can call your Google Contacts from your phone.

Procedure

1. Go to **Menu > Directory > Google Contact**.
2. Highlight the desired contact and select **Send**.


Placing an Emergency Call from a Locked Phone

Once all keys are locked on the phone, you can only dial emergency numbers or authorized numbers that are set up by your administrator, such as 911.

Procedure

1. Do one of the following:
 - Select **Emergency (Emerg)**.

The phone screen is shown below:

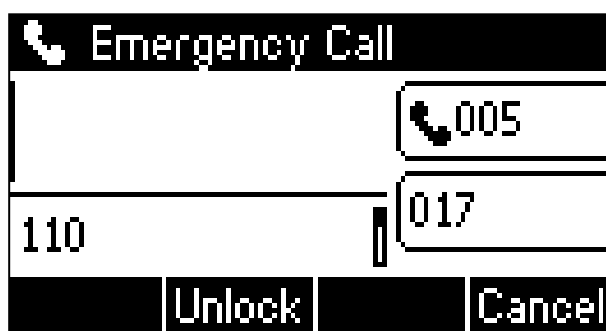

Select an emergency number in the emergency number list.

- Enter an emergency number.
2. Select **Send**.

Answering Calls

When you receive a call, you can choose to answer it manually or automatically.

Topics

[Answering a Call](#)

[Answering a Call When in a Call](#)

[Answering a Call Automatically](#)

Answering a Call

When you receive an incoming call, the phone rings and the screen displays the information of the incoming call. You can choose to answer the incoming call.

Procedure

1. Do one of the following:
 - Pick up the handset.
 - Press the Speakerphone key .
 - Press the HEADSET key .
 - Press **Answer** or the line key that has the flashing green LED indicator.

The call is answered in the speakerphone (hands-free) mode by default.

Related Topic

[Switching Among the Handset, Speakerphone and Headset Modes](#)

Answering a Call When in a Call

You can answer a call when there is already an active call on your phone.

When you are in an active call and an incoming call arrives on the phone, a call waiting tone beeps, and the incoming call information is displayed.

Procedure

1. Select **Answer**.

The active call is placed on hold, and the incoming call becomes active.

Note: You can disable the call waiting feature to reject the incoming call automatically during a call.

Related Topic

[Disabling Call Waiting](#)

Answering a Call Automatically

Auto answer enables you to automatically answer an incoming call in speakerphone (hands-free) mode when your phone is idle.

Note: When you are in an active call and an incoming call arrives on the phone, the incoming call will not be automatically answered even if the auto answer is enabled.

Your system administrator can configure the phone to automatically answer the incoming call after ending all calls.

Procedure

1. Go to **Menu > Features > Auto Answer**.
2. Select the desired line (not supported on the T30P/T30 phones).
3. Select **Enabled** from the **Status** field.
4. Select **Save**.

If the auto answer feature is enabled for the default account, the auto answer icon appears on the phone screen.

Switching Among the Handset, Speakerphone and Headset Modes

You can select the desired mode before placing a call or can alternate among Speakerphone, headset, and handset modes during a call.

Procedure

1. During the call, pick up the handset, press the Speakerphone key , or press the HEADSET key.

For example, if you're using the handset, press the HEADSET key to switch to the headset, or press the Speakerphone key to switch to the speakerphone.

Note: Your system administrator can disable you to use the handset, speakerphone (Hands-free) or headset mode.

Disabling Call Waiting

If the call waiting feature is disabled, when there is already a call, the new incoming call will be rejected automatically.

Before You Begin

Check with your system administrator if the call waiting off code is required. If required, get it from your system administrator.

Procedure

1. Go to **Menu > Features > Call Waiting**.
2. Select **Disabled** from the **Call Waiting** field.
3. (Optional.) Enter the call waiting off code in the **Off Code** field.
4. Select **Save**.

Silencing or Rejecting Incoming Calls

When you receive an incoming call, you can choose to silence or reject the call instead of answering.

Topics

- [Silencing a Call](#)
- [Rejecting a Call Manually](#)
- [Rejecting Anonymous Calls](#)
- [Rejecting Calls with Do Not Disturb \(DND\)](#)

Silencing a Call

You can silence a call to stop your phone from ringing. Even if you silence the call, the incoming call notification continues to be displayed on your phone.

Procedure

1. Select **Silence**.

Rejecting a Call Manually

You can reject a call manually, and the call may be sent to voice mail. The rejected calls are displayed in the Received Calls list in your History list.

Procedure

1. Select **Reject**.

Rejecting Anonymous Calls

You can reject incoming calls from the callers who have hidden their identities. As a result, your phone will not ring and you will not be notified of an attempted call.

Before You Begin

Check with your system administrator if the anonymous call rejection on code or off code is required. If required, get it from your system administrator.

Procedure

1. Go to **Menu > Features > Anonymous Call**.
2. Select the desired line (not supported on the T30P/T30 phones).
3. Turn on **Local Anonymous Rejection (Anonymous Rejection)**.
4. (Optional.) Select the desired value from the **Send Rejection Code** field.
5. (Optional.) Enter the anonymous call rejection on code and off code respectively in the **On Code** and **Off Code** field.
6. Select **Save**.

Related Topic

Placing an Anonymous Call

Rejecting Calls with Do Not Disturb (DND)

You can enable DND to reject all incoming calls automatically when you do not want to be interrupted.

If you want to receive incoming calls from the specific numbers when DND is enabled, you can ask your system administrator to set DND Authorized Numbers.

Note: Check with your system administrator to find out if the DND feature is available on your phone.

Topics

[Rejecting Calls with DND on All Lines](#)

[Rejecting Calls with DND on a Specific Line](#)

[Deactivating DND](#)

Rejecting Calls with DND on All Lines

If there are multiple lines on the phone, you can enable DND for all lines. After activating it, the phone will reject all incoming calls automatically.

Note: If both DND and busy forward are activated on the phone, calls will be forwarded to the configured destination number.

Before You Begin

Check with your system administrator if the DND on code or off code is required. If required, get it from your system administrator.

Procedure

1. Go to **Menu > Features > DND**.
2. Turn on DND.
3. (Optional.) Enter the DND on code or off code respectively in the **On Code** or **Off Code** field.
4. Select **Save**.

The DND icon appears in the status bar.

Tip: To activate or deactivate DND quickly, press the **DND** soft key when the phone is idle.

Rejecting Calls with DND on a Specific Line

By default, the DND feature applies to all lines on your phone. Your system administrator can change the DND mode to Custom so that you can enable DND for specific lines. This feature is not available on the T30P/T30 phones.

Before You Begin

The DND mode is set to **Custom**. Check with your system administrator if the DND on code or off code is required. If required, get it from your system administrator.

Procedure

1. Go to **Menu > Features > DND**.
2. Select the desired line.
3. Turn on DND.
4. (Optional.) Enter the DND on code or off code respectively in the **On Code** or **Off Code** field.
5. Select **Save**.

The DND icon appears on the desired line.

If you activate DND on the default line, the DND icon will appear both on the line and in the status bar.

Tip: You can press the **All On** soft key to activate DND for all lines.

Deactivating DND

You can deactivate DND when you are ready to resume receiving calls again.

Procedure

1. Go to **Menu > Features > DND**.
2. (Optional.) If the DND is activated on a specific line, select the desired line.
3. Turn off DND.
4. Select **Save**.

The DND icon disappears from the status bar.

Tip: To deactivate DND quickly, press the **DND** soft key when the phone is idle.
You can press the **All Off** soft key to deactivate DND for all lines.

Ending Calls

You can end the current call at any time.

Procedure

1. Do one of the following:
 - If you are using the handset, press the Cancel key, **End Call (EndCall)** or hang up the handset.
 - If you are using the headset, press the Cancel key or **End Call (EndCall)**.
 - If you are using the speakerphone, press the Cancel key, Speakerphone key or **End Call (EndCall)**.

Tip: You can press the HEADSET key to end calls. Check with your system administrator to find out if it is available on your phone.

Redialing a Call Automatically

You can set the phone to redial a phone number automatically when you call a contact and the contact's line is unavailable.

Procedure

1. Go to **Menu > Features > Auto Redial Setting**.
On the T33P/T33G phones, go to **Menu > Features > Others > Auto Redial Setting**.
2. Select **Enabled** from the **Auto Redial** field.
3. Enter the desired time (between 1 and 300 seconds) in the **Redial Interval** field.
4. Enter the desired times (between 1 and 300) in the **Redial Times** field.
5. Select **Save**.

When you dial a number but fail to establish a call, the phone prompts whether to auto redial the contact, select **OK** to activate auto redial.



The phone screen displays the redial times and interval. The phone will retry as many times as configured until the callee answers the call.



Muting/Unmuting Audio

When you are in a call, you can mute the audio, so that you can hear the other person, but they cannot hear you.

Procedure

1. Press the MUTE key during a call.
2. Press the MUTE key again to unmute the call.

Tip: You can also mute the microphone while the phone is dialing or ringing so that the other party cannot hear you when the call is set up.

Keep Mute

In a meeting room, if incoming calls are answered automatically on your phone, callers may hear your discussion with your colleagues. You can keep the phone in mute to prevent this unintended situation.

The mute state of your phone persists across calls. The phone stays in the mute state until you unmute the microphone manually or until the phone restarts.

Before You Begin

Check with your system administrator if keep mute is configured on your phone.

Procedure

1. Press the MUTE key when the phone is idle.
The mute icon appears on the idle screen.
2. Press the MUTE key again to deactivate the mute state.

Holding and Resuming Calls

You can place an active call on hold and resume the call when you are ready. When you place a call on hold, the held party may hear the music played by its sever.

Topics

[Holding a Call](#)

[Resuming a Held Call](#)

Holding a Call

You can place an active call on hold on your phone.

Procedure

1. Select **Hold** during a call.

The phone ignores engaged audio device (handset or headset) and plays beep in the Speakerphone (hands-free) mode by default.

Note: When you have multiple calls on the phone and the current call is held, you can press the corresponding line key to swap to the active call.

Resuming a Held Call

You can view and resume a held call on the phone.

Procedure

1. Select **Resume**.

If multiple calls are placed on hold, select the desired call first.

Note: When you have multiple calls on the phone and the current call is active, you can select **Swap** to swap to the held call.

Redirecting Incoming Calls

When you are not available to answer calls on your phone, you can forward the calls to another phone.

Topics

[Forwarding All Incoming Calls to a Contact](#)

[Forwarding an Incoming Call Manually](#)

[Forwarding Incoming Calls with a Forward Key](#)

[Diverting Calls to a Contact](#)

Forwarding All Incoming Calls to a Contact

You can set up the forwarding type which enables your phone to forward all incoming calls to a contact.

There are three types of forwarding:

- **Always Forward:** Forwards all incoming calls immediately.
- **Busy Forward:** Forwards incoming calls when you are busy in a call.
- **No Answer Forward:** Forwards incoming calls when no one answers the calls.

Topics

[Forwarding All Incoming Calls on All Lines](#)

[Forwarding All Incoming Calls on a Specific Line](#)

[Deactivating Call Forward](#)

Forwarding All Incoming Calls on All Lines

You can forward all incoming calls on the phone.

Before You Begin

Check with your system administrator if the forward on code or off code is required. If required, get it from your system administrator.

Procedure

1. Go to **Menu > Features > Call Forward**.
2. Select the desired forwarding type and select **Enabled** or **On** from the corresponding field.
3. Do one of the following:
 - Enter the contact number you want to forward incoming calls to in the **Forward to** field.
 - On the T33P/T33G phones, highlight the **Forward to** field. Press **Directory (Dir)**, and select the desired contact from the Directory list.
4. If you select the **No Answer Forward** option, select the desired ring time to wait before forwarding from the **After Ring Time** field.
5. (Optional.) Enter the always/busy/no answer forward on code or off code respectively in the **On Code** or **Off Code** field.
6. Select **Save**.

The call forward icon appears in the status bar.

Forwarding All Incoming Calls on a Specific Line

By default, the forwarding setting applies to all lines on your phone. Your system administrator can change the forward mode to Custom so that you can forward all incoming calls for specific lines. It is not available on the T30P/T30 phones.

Before You Begin

Check with your system administrator if the forward on code or off code is required. If required, get the forward on code or off code from your system administrator.

Procedure

1. Go to **Menu > Features > Call Forward**.
2. Select the desired line.
3. Select the desired forwarding type and select **Enabled** or **On** from the corresponding field.
4. Do one of the following:
 - Enter the contact number you want to forward incoming calls to in the **Forward to** field.
 - On the T33P/T33G phones, highlight the **Forward to** field. Select **Directory (Dir)** and select the desired contact from the Directory list.
5. If you select the **No Answer Forward** option, select the desired ring time to wait before forwarding from the **After Ring Time** field.
6. (Optional.) Enter the always/busy/no answer forward on code or off code respectively in the **On Code** or **Off Code** field.
7. Select **Save**.

The forward icon appears on the desired line.

If you activate forward on the default line, the forward icon will appear both on the line and in the status bar.

Tip: You can press the **All Lines** soft key to activate forward for all lines.

Deactivating Call Forward

You can deactivate the call forward when you no longer want to forward your calls.

Procedure

1. Go to **Menu > Features > Call Forward**.
2. (Optional.) If the forward is activated for a specific line, select the desired line.

3. Select the desired forwarding type and select **Disabled** or **Off** from the corresponding field.
4. Select **Save**.

Forwarding an Incoming Call Manually

You can manually forward the call to another contact while your phone rings.

Procedure

1. When the phone is ringing, **FWD**.
2. Enter the number you want to forward the incoming call to.
3. Press the OK key or select **Send**.

The phone prompts a call forward message.

Forwarding Incoming Calls with a Forward Key

When the phone receives an incoming call, you can easily press the Forward key to forward the incoming call to a specific contact.

Before You Begin

If you are using the T30P/T30 phones, check with your system administrator if the Forward key has set for your phone.

Procedure

1. Go to **Menu > Features > Dsskey**.
2. Select the desired line key.
3. Select **Key Event** from the **Type** field.
4. Select **Forward** from the **Key Type** field.
5. If your system administrator has set the forward mode to **Custom**, select the desired line.
6. Do one of the following:
 - (Optional.) Enter the string that will display on the phone screen in the **Label** field.
Enter the contact number you want to forward the incoming calls to in the **Value** field.
 - On the T33P/T33G phones, highlight the **Label** or **Value** field. Select **Directory (Dir)** and select the desired contact from the Directory list.
7. Select **Save**.

Tip: By default, you can long press the desired line key to set it.

When the phone is ringing, press the forward key to quickly forward the call to the specific contact.

Diverting Calls to a Contact

You can divert all incoming calls from a particular contact to another contact. Auto divert has precedence over call forward.

Procedure

1. Select **Directory (Dir)** or go to **Menu > Directory > Local Directory**.
2. Select the desired contact group or **All Contacts**.
3. Highlight the desired contact, and select **Option > Detail**.
4. Edit the contact information.
5. Enter a contact's number you want to divert the call to in the **Auto Divert** field.
6. Select **Save**.

Transferring Calls

During a call, you can transfer the call to another contact.

You can use one of three ways:

- **Blind Transfer:** Transfer a call directly to the third party without consulting.
- **Semi-Attended Transfer:** Transfer a call when receiving ringback.
- **Attended Transfer (Consultative Transfer):** Transfer a call with prior consulting.

Topics

[Performing a Blind Transfer](#)

[Performing a Semi-Attended/Attended Transfer](#)

[Performing Transfer with a Transfer Key](#)

Performing a Blind Transfer

You can transfer a call to another contact immediately without consulting with her/him first.

Procedure

1. Press the TRAN key or **Transfer (Trans)** during a call.
2. Do one of the following:
 - Enter the number or select a contact from the placed call list you want to transfer to.
 - If you have set a Speed Dial key, you can also press the Speed Dial key to transfer the call to the contact directly.
 - Press **Directory (Dir)**. Select the desired contact from the Directory list.
3. Press **B Transfer (B Trans)** or the TRAN key to complete the transfer.

Tip: If you are using a handset, the transfer can be completed by hanging up the handset.

Performing a Semi-Attended/Attended Transfer

You can transfer calls to other contacts immediately when receiving ringback or after consulting with them first.

Procedure

1. Press the TRAN key or **Transfer (Trans)** during a call.
2. Do one of the following:
 - Enter the number or select a contact from the placed call list you want to transfer the call to.
 - Select **Directory (Dir)**. Select the desired contact from the Directory list.
3. Press the OK key or select **Send**.
4. Do one of the following:
 - When you hear the ringback tone, press the TRAN key or **Transfer (Trans)** to finish a semi-attended transfer.
 - After the contact answers the call, press the TRAN key or **Transfer (Trans)** to finish an attended transfer (consultative transfer).

Tip: If you are using a handset, the transfer can be completed by hanging up the handset.

Performing Transfer with a Transfer Key

By default, you can transfer a call to a specific contact directly using a Transfer key during a call.

Your system administrator can also set your phone to perform attended transfer when using a Transfer key.

Topics

[Setting a Transfer Key](#)

[Performing a Blind Transfer Using a Transfer Key](#)

[Performing a Semi-attended/Attended Using a Transfer Key](#)

[Performing a Call Transfer by Selecting a Transfer Mode](#)

Setting a Transfer Key

You can set a line key as a Transfer key, and specify a contact you want to transfer a call to for this key.

Line key is not available on the T30P/T30 phones, so ask your system administrator to set a Transfer key for your phone.

Procedure

1. Go to **Menu > Features > Dsskey**.
2. Select the desired line key.
3. Select **Key Event** from the **Type** field.
4. Select **Transfer (Trans)** from the **Key Type** field.
5. Do one of the following:
 - (Optional.) Enter the string that will appear on the phone screen in the **Label** field.
Enter the contact number you want to transfer the call to in the **Value** field.
 - On the T33P/T33G phones, highlight the **Label** or **Value** field. Select **Directory (Dir)** and select the desired contact from the Directory list.
6. Select **Save**.

Tip: By default, you can long press the desired line key to set it.

Performing a Blind Transfer Using a Transfer Key

After you have set a Transfer key with a specific contact, you can perform a blind transfer by using it.

Before You Begin

Confirm with your system administrator that the transfer mode has set to perform a blind transfer.

Procedure

1. Press the Transfer key during a call.
The call is transferred to the specific contact directly.

Related Topic

[Setting a Transfer Key](#)

Performing a Semi-attended/Attended Using a Transfer Key

After you have set a Transfer key with a specific contact, you can perform a semi-attended/attended transfer by using it.

Before You Begin

Confirm with your system administrator that the transfer mode has set to perform attended transfer.

Procedure

1. Press the Transfer key during a call.
The phone calls the specific contact first. Wait until you hear the ringback tone or until the contact answers the call.
2. Press the Transfer key again.

Related Topic

[Setting a Transfer Key](#)

Performing a Call Transfer by Selecting a Transfer Mode


During the call, you can press the Transfer key to select a transfer mode.

Before You Begin

You need to set a Transfer key for a specific contact. Check with your system administrator to find out if this call transfer feature is available on the phone.

Procedure

1. Press the Transfer key during a call, the phone screen is shown below:

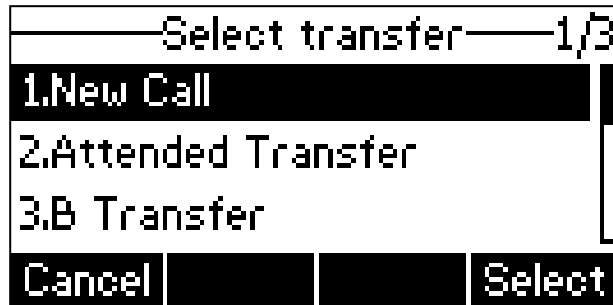

2. Select the desired transfer mode.

Related Topic

[Setting a Transfer Key](#)

Conference Calls

The phone supports creating local conference and network conference.

During the conference, follow these tips:

- Use the handset or a headset if you're in an open environment.
- Mute your microphone when you are not speaking, especially in noisy environments.
- Avoid tapping or rustling papers near the microphone.
- Speak in your normal voice without shouting.

Topics

[Local Conference](#)

[Network Conference](#)

Local Conference

You can initiate a five-way (including yourself) conference calls with your contacts on the phone.

Note: Check with your system administrator to find out if the local conference is enabled on your phone.

Topics

[Setting Up a Local Conference Call](#)

[Merging Two Calls into a Conference](#)

[Inviting a Transfer Target and a Transferee into a Conference](#)

[Holding or Resuming a Conference Call](#)

[Muting or Unmuting a Conference Call](#)

[Splitting a Conference Call](#)

[Managing Conference Participants](#)

[Ending a Conference Call](#)

Setting Up a Local Conference Call

Procedure

1. Place a call to the first party.
2. Select **Conference (Conf)** to place a new call.
The active call is placed on hold.
3. Dial the second party's number.
You can also select the desired contact from the search list, or select a contact from the placed call list or Directory before you enter the number.
4. When the second party answers the call, select **Conference (Conf)** to add the second party to the conference.

Merging Two Calls into a Conference

You can invite a held call into a conference call with the active call.

Procedure

1. Place two calls on the phone.
2. Select the desired call for a conference and ensure that the call is active.
3. Select **Conference (Conf)**.
4. Highlight the desired hold call and select **Send**.

The active call and the selected hold call are joined into a conference.

Inviting a Transfer Target and a Transferee into a Conference

After consulting with the contact you want to transfer a call to, you can invite two calls into a conference.

Procedure

1. Select **Conference (Conf)** after talking with the contact you want to transfer a call to.

The transferee and the transfer target join the conference.

Holding or Resuming a Conference Call

When you place a conference call on hold, other participants cannot hear each other until you resume the held conference call.

Procedure

1. Select **Hold** to place the conference on hold.
2. Select **Resume** to resume the held conference call.

Muting or Unmuting a Conference Call

When you mute the local microphone during a conference call, other participants can hear each other except you.

Procedure

1. Press the MUTE key to mute the conference.
2. Press the MUTE key again to unmute the conference.

Splitting a Conference Call

You can split the conference call into individual calls. After the split, the conference call ends, and other parties are held.

Procedure

1. Select **Split**.

Managing Conference Participants

You can manage the conference participants to make the conference more flexible.

Procedure

1. During a conference call, select **Manage**.
2. Select the desired party, you can do the following:
 - Select **Far Mute (FarMute)** to mute the party. The muted party can hear everyone, but no one can hear the muted party.
 - Select **Far Hold (FarHold)** to hold the party. The held party cannot hear anyone, and no one can hear the held party.
 - Select **Remove** to remove the party from the conference call.

Ending a Conference Call

When you end the conference call, the other parties drop the call.

However, the system administrator can set up your phone so that the other two parties remain connected when you end the conference call.

Procedure

1. Select **End Call (EndCall)**.

Network Conference

If your system administrator has set a network conference feature on your phone, you can initiate a conference with two or more contacts.

Topic

[Setting Up a Network Conference](#)

Setting Up a Network Conference

You can set up a network conference with two or more contacts.

Procedure

1. Place a call to the first party.
2. Select **Conference (Conf)**.
The active call is placed on hold.
3. Dial the second party's number.
4. When the second party answers the call, select **Conference (Conf)** to add the second party to the conference.
5. Select **Conference (Conf)** to place a new call.
The conference call is placed on hold.
6. Enter the number of the new party, and then press the OK key or **Send**.
7. When the new party answers the call, select **Conference (Conf)** to add the new party to the conference.
8. Repeat steps 5 to 7 until you add all parties.

Note: The procedures for setting up a network conference call on specific servers may be different. Contact your system administrator for more information.

Multicast Paging

Multicast Paging allows you to broadcast instant audio announcements to users who are listening to a specific multicast group on a specific channel.

The phone supports the following 31 channels:

- **0:** Broadcasts are sent to channel 0. Note that the Yealink IP phones running firmware version 80 or earlier can be regarded as listening to channel 0. It is the default channel.

- **1 to 25:** Broadcasts are sent to channel 1 to 25. We recommend that you specify these channels when broadcasting with Polycom IP phones which have 25 channels you can listen to.
- **26 to 30:** Broadcasts are sent to channel 26 to 30. We recommend that you specify these channels when broadcasting with Yealink IP phones running firmware version 81 or later.

Note: All IP phones in the multicast paging group must be deployed in the same subnet since a broadcast is used. The phone can only send/receive broadcasts to/from the listened channels. Other channels' broadcasts will be ignored automatically by the IP phone.

Topics

[Sending Multicast Paging](#)
[Receiving Multicast Paging](#)
[Managing a Paging Call](#)

Sending Multicast Paging

Your phone supports up to 31 groups for paging. You can assign a label to each group to identify the phones in the group, such as All, Sales, or HR.

You can set a line key as Multicast Paging key or Paging List key on the phone, which allows you to send announcements to the phones with pre-configured multicast address(es) on specific channel(s).

Note: Multicast RTP is one way only from the sender to the multicast address(es) (receiver). For outgoing RTP multicasts, all other existing calls on the phone will be placed on hold.

Topics

[Setting a Multicast Paging Key](#)
[Sending a Paging by a Multicast Paging Key](#)
[Setting a Paging List Key](#)
[Setting a Paging Group](#)
[Sending Pages by a Paging List Key](#)
[Deleting a Paging Group](#)

Setting a Multicast Paging Key

You can set a Multicast Paging key for a paging group, which allows you to send announcements quickly on the idle screen.

Line key is not available on the T30P/T30 phones, so ask your system administrator to set a Multicast Paging key for your phone.

Before You Begin

Get the multicast IP address and port number from your system administrator.

Procedure

1. Go to **Menu > Features > Dsskey**.
2. Select the desired line key.
3. Select **Key Event** from the **Type** field.
4. Select **Multicast Paging** from the **Key Type** field.
5. (Optional.) Enter the paging group name in the **Label** field.
6. Enter the multicast IP address and port number (for example, 224.5.6.20:10008) in the **Value** field.
7. Enter the desired channel between 0 and 30 in the **Channel** field.
8. Select **Save**.

Tip: By default, you can long press the desired line key to set it.

Sending a Paging by a Multicast Paging Key

You can send a paging by using the Multicast Paging key when the phone is idle.

Before You Begin

You need to set a Multicast Paging key in advance. If you are using the T30P/T30 phones, check with your system administrator if the Multicast Paging key has set for your phone.

Procedure

1. Press the Multicast Paging key when the phone is idle.

Both your phone and receiver's phone play a warning tone and the multicast RTP session will be automatically answered on the receiver's phone in the speakerphone (hands-free) mode.

On all IP phones except the T30P/T30 phones, the multicast paging key LED glows green.

The following figure shows a multicast RTP session on the phone:



Related Topic

[Setting a Multicast Paging Key](#)

Setting a Paging List Key

You can set a Paging List key to easily access the paging groups on the idle screen. Line key is not available on the T30P/T30 phones, so ask your system administrator to set a Paging List key for your phone.

Procedure

1. Go to **Menu > Features > Dsskey**.
2. Select the desired line key.
3. Select **Key Event** from the **Type** field.
4. Select **Paging List** from the **Key Type** field.
5. (Optional.) Enter the string that will display on the phone screen in the **Label** field.
6. Select **Save**.

Tip: By default, you can long press the desired line key to set it.

Setting a Paging Group

You can edit the information of the paging group.

Before You Begin

A Paging List key is set in advance. Get the multicast IP address and port number from your system administrator.

Procedure

1. Press the Paging List key when the phone is idle.
2. Select the desired paging group.
The default tag is Empty if it is not configured before.
3. Select **Option > Edit**.
4. Enter the multicast IP address and port number (for example, 224.5.6.20:10008) in the **Address** field.
5. Enter the string that will display on the phone screen in the **Label** field.
6. Enter the desired channel between 0 and 30 in the **Channel** field.
7. Select **Save**.
8. To set more paging groups, repeat steps 2 to 7.

Sending Pages by a Paging List Key

You can send a paging by using the Paging List key when the phone is idle.

Before You Begin

You need to set a Paging List key in advance.

Procedure

1. Press the Paging List key when the phone is idle.
2. Select the desired paging group.
3. Select **Paging** to send RTP.

Both your phone and receiver's phone play a warning tone and the multicast RTP session will be automatically answered on the receiver's phone in the speakerphone (hands-free) mode.

Related Topic

[Setting a Paging List Key](#)

Deleting a Paging Group

You can delete any group from the paging group list.

Procedure

1. Press the Paging List key when the phone is idle.
If the Paging List key is not set, you can also go to **Menu > Features > Others > Paging List** for the T33P/T33G phone or **Menu > Features > Paging List** for other phones.
2. Select the desired paging group.
3. Select **Option > Delete**.
The phone prompts you to delete the paging group or not.
4. Select **OK**.

Receiving Multicast Paging

Your system administrator has set a listening paging group for you, you can automatically receive a paging call when the phone is idle.

When there is a voice call or a paging call in progress, or when DND is activated on your phone, the phone handles the new paging call differently according to the multicast listening settings configured by your system administrator.

Managing a Paging Call

During a paging call, you can manage it manually at any time.

Procedure

- Select **Hold** to place the current paging call on hold.
The paging call is placed on hold and the receiver releases the session.

- Select **Resume** to resume the held paging call.
The multicast RTP session is re-established.
- Select **End Call (EndCall)** to end the paging call.

Advanced Call Features

You can perform some server-dependent tasks on the phone. Contact your system administrator to find out if your phone supports these advanced call features.

Topics

[Using Call Completion](#)
[Call Pickup](#)
[Call Park and Call Retrieve](#)
[Busy Lamp Field \(BLF\)](#)
[BLF List](#)
[Shared Line](#)
[Intercom](#)
[Short Message Service \(SMS\)](#)
[Voice Mail](#)
[Using the Hot Desking](#)
[Automatic Call Distribution \(ACD\)](#)

Using Call Completion

When you call someone who is temporarily unavailable to answer the call, you can monitor the busy party and establish a call after the busy party becomes available to receive a call.

Note: Call completion is not available on all servers. For more information, contact your system administrator.

Procedure

1. Go to **Menu > Features > Call Completion**.
On the T33P/T33G phones, go to **Menu > Features > Others > Call Completion**.
2. Select **Enabled** in the **Call Completion** field.
3. Select **Save**.

When you place a call and the callee is temporarily unavailable to answer the call, the phone prompts whether to wait for the callee, select **OK** to activate the call completion feature.



When the callee becomes idle, the phone prompts whether to dial the number, select **OK** to dial the number.



Call Pickup

You can use call pickup to answer someone else's incoming call on your phone.

The phone supports the following two call pickup features:

- **Directed Call Pickup:** allows you to pick up incoming calls to another phone.
- **Group Call Pickup:** allows you to pick up incoming calls to any phone within a predefined group.

Check with your system administrator to find out if this feature is available on your phone.

Topics

[Picking up a Call Directly](#)

[Picking up a Group Call Directly](#)

[Picking up a Call with a Pick Up Key](#)

[Picking up a Call with a Group Pickup Key](#)

Picking up a Call Directly

You can answer a call that rings on another phone.

Before You Begin

The target phone receives an incoming call. Your system administrator has enabled the directed call pickup and set the directed call pickup code.

Procedure

1. Pick up the handset, press the line key or the Speakerphone key.
The DPickup appears on the phone screen.
2. Select **DPickup** on your phone.
3. Enter the phone number which is receiving an incoming call.
4. Select **DPickup** again.

The call is answered on your phone.

Tip: When the phone is idle, you can use a Directed Pickup or BLF/BLF List key to pick up a call to a specific contact directly. BLF/BLF List key is not available on the T30P/T30 phone.

Related Topics

[Picking up a Call with a Pick Up Key](#)

[Picking up a Remote Call by BLF Key](#)

[Picking up a Remote Call by BLF List Key](#)

Picking up a Group Call Directly

When any phone within a predefined group receives an incoming call, you can pick up that call on your phone.

If there are multiple incoming calls on the group at the same time, you can only pick up the first incoming call.

Before You Begin

Your system administrator has enabled the group call pickup and set the group call pickup code.

Procedure

1. Pick up the handset, press the line key or the Speakerphone key.
*The **GPickup** appears on the phone screen.*
2. Select **GPickup** on your phone when any phone in the group receives an incoming call.
The call is answered on your phone.

Tip: When the phone is idle, you can use a Group Pickup key to pick up a group call directly.

Related Topic

[Picking up a Call with a Group Pickup Key](#)

Picking up a Call with a Pick Up Key

You can easily use a Pick Up key to pick up a call to a specific contact's phone.

Before You Begin

Ask your system administrator for the directed call pickup code. If you are using the T30P/T30 phones and check with your system administrator if the Directed Pickup key has set for your phone.

Procedure

1. Go to **Menu > Features > Dsskey**.
2. Select the desired line key.
3. Select **Key Event** from the **Type** field.
4. Select **Pick Up** from the **Key Type** field.
5. Select the desired line from the **Account ID** field.
6. Do one of the following:
 - (Optional.) Enter the string that will display on the phone screen in the **Label** field.
Enter the directed call pickup code followed by the specific extension in the **Value** field.
 - On the T33P/T33G phones, highlight the **Label** or **Value** field. Select **Directory (Dir)** and select the desired contact from the Directory list.
7. Select **Save**.

Tip: By default, you can long press the desired line key to set it.

When the target phone receives an incoming call, you can press the Pick Up key, and the call is answered on your phone.

Picking up a Call with a Group Pickup Key

You can easily select a Group Pickup key to pick up a group call.

Before You Begin

Check with your system administrator if the group call pickup code is required for this key. If required, get the group call pickup code from your system administrator. If you are using the T30P/T30 phones, check with your system administrator if the Group Pickup key has set for your phone.

Procedure

1. Go to **Menu > Features > Dsskey**.
2. Select the desired line key.

3. Select **Key Event** from the **Type** field.
4. Select **Group Pick Up** from the **Key Type** field.
5. Select the desired line from the **Account ID** field.
6. Do one of the following:
 - (Optional.) Enter the string that will appear on the phone screen in the **Label** field.
Enter group call pickup code in the **Value** field.
 - On the T33P/T33G phones, highlight the **Label** or **Value** field. Select **Directory (Dir)** and select the desired contact from the Directory list.
7. Select **Save**.

Tip: By default, you can long press the desired line key to set it.

When any phone within a predefined group of phones receives an incoming call, you can press the Group Pickup key, and the call is answered on your phone.

Call Park and Call Retrieve

You can park a call, and then retrieve the call either from your phone or another phone. After parked, the call is placed on hold, you can continue the conversation after retrieving it.

Note: Call park is not available on all servers. Check with your system administrator to find out if it is available on your phone.

Topics

- [Parking or Retrieving a Call in the FAC Mode](#)
- [Parking or Retrieving a Call in the Transfer Mode](#)
- [Parking or Retrieving a Call with a Park or Retrieve Key](#)

Parking or Retrieving a Call in the FAC Mode

You can park the call to the local extension or the desired extension through dialing the park code.

Topics

- [Parking a Call in the FAC Mode](#)
- [Retrieving a Parked Call in the FAC Mode](#)


Parking a Call in the FAC Mode

You can park a call in the FAC mode directly. When you park a call to the local extension or the desired extension, the call is held in the same network on your phone.

Before You Begin

Your system administrator has set call park in the FAC mode.

Procedure

1. During a call, select **Park** (You may need to select **More** () > **Park**).

The phone will dial the call park code which is pre-configured.

2. Do one of the following:
 - If you want to park the call against the local extension, press the # key.
 - If you want to park the call against the desired extension, enter the extension (for example, 4606) where you want to park the call and press the # key.

If the call is parked successfully, you will hear a voice prompt that the call is parked.

Tip: You can use a Park key or a BLF key to park a call to a specific contact directly. BLF key is not available on the T30P/T30 phone.

Related Topics

[Parking or Retrieving a Call with a Park or Retrieve Key](#)
[Parking or Retrieving a Call by BLF Key](#)

Retrieving a Parked Call in the FAC Mode

You can retrieve a parked call in the FAC mode from any phone within your network.

Before You Begin

Your system administrator has set call park in the FAC mode. There is a call parked on the extension.

Procedure

1. Select **Retrieve** (You may need to select **More** () > **Retrieve**) on the dialing screen.

The phone will dial the park retrieve code which is configured in advance.

2. Follow the voice prompt to retrieve:
 - Press the # key on the phone where the call is parked.
 - Enter the desired extension followed by # (for example, 4606#) on any phone.

Tip: When the phone is idle, you can use a Retrieve key or a BLF key to retrieve a parked call directly. BLF key is not available on the T30P/T30 phone.

Related Topics

[Parking or Retrieving a Call with a Park or Retrieve Key](#)
[Parking or Retrieving a Call by BLF Key](#)
[Retrieving a Call by a BLF List Key](#)

Parking or Retrieving a Call in the Transfer Mode

You can park the call to the shared parking lot through a blind transfer.

For some servers, the system will return a specific retrieve park number (park retrieve code) after parking successfully.

Topics

[Parking a Call in the Transfer Mode](#)
[Retrieving a Parked Call in the Transfer Mode](#)


Parking a Call in the Transfer Mode

You can park a call in the transfer mode directly. When you park a call to the shared parking lot, the call is held on your phone.

Before You Begin

Your system administrator has set call park in the Transfer mode.

Procedure

1. During a call, select **Park** (You may need to select **More** () > **Park**).

The call will be directly transferred to the shared parking lot.

Tip: You can use a Call Park key to park a call to a specific shared parking lot directly.

Related Topic

[Parking or Retrieving a Call with a Park or Retrieve Key](#)

Retrieving a Parked Call in the Transfer Mode

You can retrieve a parked call in the transfer mode from any phone in the same network.

Before You Begin

Your system administrator has set call park in the Transfer mode. There is a call parked on the shared parking lot.

Procedure

1. Select **Retrieve** (You may need to select the **More**  > **Retrieve**) on the dialing screen.

The phone will retrieve the parked call from the shared parking lot.

Tip: When the phone is idle, you can use a Retrieve key to retrieve a parked call directly.

Related Topic

[Parking or Retrieving a Call with a Park or Retrieve Key](#)

Parking or Retrieving a Call with a Park or Retrieve Key

You can easily use a Park key to park a call to a specific extension (if the FAC mode is set) or shared parking lot (if the Transfer mode is set), and quickly retrieve this parked call using a retrieve key.

Topics





[State Indicator of the Park/Retrieve key](#)

[Parking a Call using a Park Key](#)

[Retrieving a Parked Call using a Retrieve Key](#)

State Indicator of the Park/Retrieve key

On T33P/T33G phones, you can get the call park/retrieve status by viewing the icon indicator of the Park/Retrieve key.

Icons	Description	Icons	Description
	Park successfully/Idle state.		Park failed.
	Ringing state.		Retrieve parked call.

Parking a Call using a Park Key

You can set a line key as a Park key, and specify an extension or a shared parking lot you want to park a call to for this key. By using the Park key you can park a call quickly.

Before You Begin

Check with your system administrator if the FAC or Transfer mode is set on your phone, and if **Account ID** is necessary for this key.

Procedure

1. Go to **Menu > Features > Dsskey**.
2. Select the desired line key.
3. Select **Key Event** from the **Type** field.
4. Select **Call Park** from the **Key Type** field.
5. (Optional.) Select the desired line from the **Account ID** field.
6. Do one of the following:
 - (Optional.) Enter the string that will appear on the phone screen in the **Label** field.
Enter the park extension number or the shared parking lot you want to park the call to in the **Value** field.
 - On the T33P/T33G phones, highlight the **Label** or **Value** field. Select **Directory (Dir)** and select the desired contact from the Directory list.
7. Select **Save**.

Tip: By default, you can long press the desired line key to set it.

During a call, you can press the Call Park key, and the call is parked to the desired extension or the shared parking lot directly.

Retrieving a Parked Call using a Retrieve Key

You can set a line key as a Retrieve key, and specify a parked extension or retrieve lot you want to retrieve a parked call from for this key. By using the Retrieve key you can retrieve a parked call quickly.

Before You Begin

Check with your system administrator if the FAC or Transfer mode is set on your phone, and if **Account ID** is necessary for this key.

Procedure

1. Go to **Menu > Features > Dsskey**.
2. Select the desired line key.
3. Select **Retrieve Park** from the **Type** field.
4. (Optional.) Select the desired line from the **Account ID** field.
5. Do one of the following:
 - (Optional.) Enter the string that will appear on the phone screen in the **Label** field.
Enter the parked extension or the retrieve lot in the **Value** field.
 - On the T33P/T33G phones, highlight the **Label** or **Value** field. Select **Directory (Dir)** and select the desired contact from the Directory list.
6. Select **Save**.

Tip: By default, you can long press the desired line key to set it.

When there is a call parked on the extension or the shared parking lot, you can press the Retrieve key on the idle screen, and the call is retrieved from the parked extension or shared parking lot directly.

Busy Lamp Field (BLF)

You can monitor a specific remote line using a BLF key for status changes on the phone. It is not available on the T30P/T30 phones.

Topics

[State Indicator of Remote Line by BLF Key](#)

[Audio Alert for BLF Pickup](#)

[Visual Alert for BLF Pickup](#)

[Setting a BLF Key](#)

[Picking up a Remote Call by BLF Key](#)


[Transferring a Call by BLF Key](#)







[Parking or Retrieving a Call by BLF Key](#)

State Indicator of Remote Line by BLF Key

You can get the monitored line's status by viewing the LED and icon indicator of the BLF key.

The state indicator of the BLF key varies by phone models.

LED Status	Icons	Description
	T33P/T33G	
Solid green		The monitored line is idle.

LED Status	Icons	Description
	T33P/T33G	
Fast-flashing red		The monitored line is ringing.
		The monitored line is dialing.
Solid red		The monitored line is busy or in a call.
Slowly-flashing red		The monitored line places a call on hold.
		A call is parked to the monitored line.
Off		Monitored line fails to register or does not exist.

Audio Alert for BLF Pickup

The Audio Alert for BLF Pickup feature allows your phone to play a tone when the specified monitored line receives an incoming call.

Setting an Alert Tone for Monitored Lines

You can set the alert ring type for the monitored lines to make it easier to recognize.

Before You Begin

Check with your system administrator to find out if the Audio Alert for BLF Pickup feature is available.


Procedure

- Go to **Menu > Settings > Basic Settings > Sound > BLF Ring Type**.
On the T33P/T33G phones, go to **Menu > Basic > Sound > BLF Ring Type**.
- Select the desired ring tone.
- Select **Save**.

Visual Alert for BLF Pickup

Your system administrator can configure your phone to display the call information when the specified monitored line receives an incoming call.

You can select to pick up the call to the monitored line, place a call to the monitored line, place a new call or go back to the idle screen.

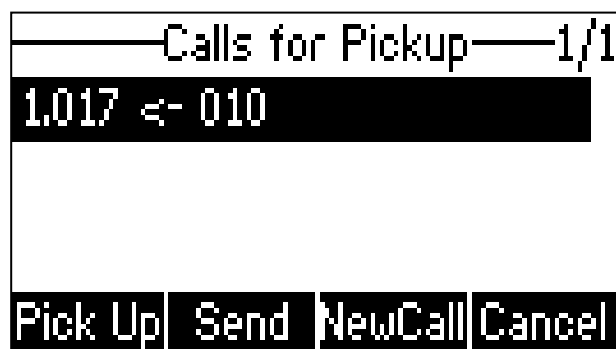

Note: If you press **Cancel** to go back to the idle screen, you can long press the BLF key to enter the Calls for Pickup screen again.

Setting a BLF Key

You can set a BLF key to monitor a specific line for status changes on the phone.

Procedure

1. Go to **Menu > Features > Dsskey**.
2. Select the desired line key.
3. Select **BLF** from the **Type** field.
4. Select the desired line from the **Account ID** field.
5. Do one of the following:
 - (Optional.) Enter the string that will appear on the phone screen in the **Label** field.
Enter the phone number or the extension you want to monitor in the **Value** field.
 - On the T33P/T33G phones, highlight the **Label** or **Value** field. Select **Directory (Dir)** and select the desired contact from the Directory list.
6. (Optional.) Enter the directed call pickup code in the **Extension** field.
7. Select **Save**.

Tip: By default, you can long press the desired line key to set it.

Note: During a call, you can press the BLF key to select a transfer mode. Check with your system administrator to find out if this feature is available on the phone.

Picking up a Remote Call by BLF Key

When the monitored users are not at their desks and someone rings their lines, you can pick up the desired call simply by pressing the flashing BLF key.

If your system administrator sets the directed call pickup code in advance, you can use the BLF key to pick up the call directly. If not or if you want to set a pickup code for a specific BLF line, you can set a pickup code for the BLF key manually.

Before You Begin

You have edited the BLF key's **Extension** field with the directed call pickup code from your system administrator.

Procedure

1. When the monitored line receives an incoming call, you can do one of the following:
 - Press the BLF key to pick up the call for the monitored line directly.
 - Long press the BLF key.
*The **Pick Up**, **Send**, **New Call** and **Cancel** appear on the screen.*
Select **Pick Up** to pick up the call.

If there are multiple incoming calls on the monitored line, select the desired call to pick up.

Related Topic

[Setting a BLF Key](#)

Transferring a Call by BLF Key

When there is already an active call on the IP phones, you can transfer the active call to the monitored line by pressing the BLF key.

The phone transfers the active call differently depending on the Transfer Mode via Dsskey feature configured by your system administrator.

Topics

[Performing a Blind Transfer](#)

[Performing a Semi-attended/Attended Transfer](#)

Performing a Blind Transfer

During a call, you can transfer the call to the monitored contact in a blind-transfer way.

Before You Begin

Check with your system administrator if the Transfer Mode via Dsskey is set to **Blind Transfer**.

Procedure

1. During a call, press the BLF key of the monitored line which you want to transfer this call to.

Performing a Semi-attended/Attended Transfer

During a call, you can transfer the call to the monitored contact in the semi-attended/attended-transfer way.

Before You Begin

Check with your system administrator if the Transfer Mode via Dsskey is set to **Attended Transfer**.

Procedure

1. During a call, press the BLF key of the monitored line which you want to transfer this call to.
The phone will dial out the number of the monitored line.
2. Press the BLF key of the monitored line again or **Transfer (Trans)** to complete the transfer when the monitored user receives ringback or after the monitored user answers the call.

Parking or Retrieving a Call by BLF Key

You can use the BLF key to park a call or retrieve a parked call directly.

Note: Check with your system administrator to find out if it is available on your phone.

Topics

[Parking a Call to a Monitored Line](#)

[Retrieving a Parked Call](#)


Parking a Call to a Monitored Line

During the call, you can use the BLF key to park the current call to a monitored line directly.

Before You Begin

Your system administrator has set call park feature in the FAC mode in advance.

Procedure

1. During a call, select **Park** (You may need to select the **More** () > **Park**).
2. Press the desired BLF key to park the call to the monitored line.

Retrieving a Parked Call

You can use the BLF key to retrieve a call that is parked to the monitored line.

Before You Begin

Your system administrator has set call park feature in the FAC mode.

Procedure

1. Select **Retrieve** on the dialing screen.
2. Press the desired BLF key to retrieve a call that is parked to the monitored line.

BLF List

BLF List feature enables you to monitor a list of users defined by your system administrator, and the respective key LEDs or icons will either flash or glow depending on the status of monitored lines.

It is not available on the T30P/T30 phones. Check with your system administrator to find out if this feature is available on your phone.

Topics

[State Indicator of Remote Line by BLF List Key](#)

[Audio Alert for BLF Pickup](#)

[Visual Alert for BLF Pickup](#)

[Ring Type for BLF Parked Call Monitor](#)

[Visual Alert for BLF Parked Call Monitor](#)

[Picking up a Remote Call by BLF List Key](#)

[Transferring a Call by BLF List Key](#)

[Parking a Call by a BLF List Key](#)

[Retrieving a Call by a BLF List Key](#)








[Barging in an Active Call by BLF List Key](#)

[Retrieving a Call Parked to the Monitored Line](#)

State Indicator of Remote Line by BLF List Key

You can get the monitored line's status by viewing the LED and icon indicator of the BLF List key.

The state indicator of the BLF list key varies by phone models.

LED Status	Icons	Description
	T33P/T33G	
Solid green		The monitored line is idle.
Fast-flashing red		The monitored line is ringing.
		The monitored line is dialing.
Solid red		The monitored line is busy or in a call.
Slowly-flashing red		The monitored line places a call on hold.
		A call is parked to the monitored line.
Off		Monitored line fails to register or does not exist.

Audio Alert for BLF Pickup

The Audio Alert for BLF Pickup feature allows your phone to play a tone when the specified monitored line receives an incoming call.

Setting an Alert Tone for Monitored Lines

You can set the alert ring type for the monitored lines to make it easier to recognize.

Before You Begin

Check with your system administrator to find out if the Audio Alert for BLF Pickup feature is available.

Procedure


1. Go to **Menu > Settings > Basic Settings > Sound > BLF Ring Type**.
On the T33P/T33G phones, go to **Menu > Basic > Sound > BLF Ring Type**.

2. Select the desired ring tone.
3. Select **Save**.

Visual Alert for BLF Pickup

Your system administrator can configure your phone to display the call information when the specified monitored line receives an incoming call.

You can select to pick up the call to the monitored line, place a call to the monitored line, place a new call or go back to the idle screen.

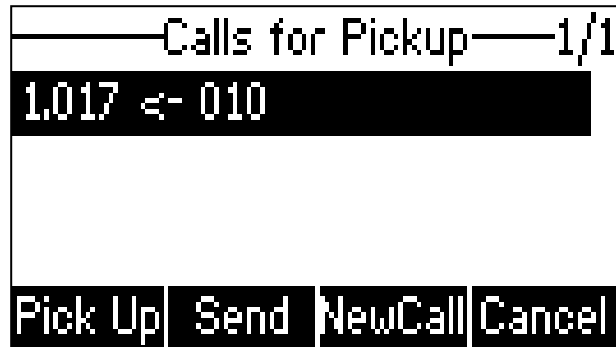

Note: If you press **Cancel** to go back to the idle screen, you can long press the BLF List key to enter the Calls for Pickup screen again.

Ring Type for BLF Parked Call Monitor

The Audio Alert for BLF Parked Call Monitor feature allows your phone to play a tone when a call is parked against the monitored user's phone number.

Topic

[Setting an Alert Tone for the BLF Parked Call Monitor](#)

Setting an Alert Tone for the BLF Parked Call Monitor

You can set the alert ring type when there is a call parked to the monitored lines.

Before You Begin

Check with your system administrator to find out if the Audio Alert for BLF Parked Call Monitor feature is available.

Procedure

1. Go to **Menu > Settings > Basic Settings > Sound > Ring Type for BLF Parked Call Monitor**.
On the T33P/T33G phones, go to **Menu > Basic > Sound > Ring Type for BLF Parked Call Monitor**.
2. Select the desired ring tone.
3. Select **Save**.

Visual Alert for BLF Parked Call Monitor

Your system administrator can configure your phone to display the call information when the specified monitored line receives an incoming call.

You can select to retrieve the call parked to the monitored line, place a call to the monitored line, place a new call or go back to the idle screen.



Picking up a Remote Call by BLF List Key

When the monitor user is not at his/her desk and someone rings his/her line, you can pick up the call simply by pressing the flashing BLF List key. You can also check the caller ID first, and then pick up the incoming call.

Before You Begin

Check with your system administrator to find out if this feature is available on your phone.

Procedure

1. Do one of the following:
 - Press the BLF List key to pick up the call for the monitored line directly.
 - Long press the BLF List key.

*The **Pick Up**, **Send**, **New Call** and **Cancel** appear on the screen.*

Select **Pick Up** to pick up the call.

If there are multiple incoming calls on the monitored line, select the desired call to pick up.

Transferring a Call by BLF List Key

When there is already an active call on the IP phones, you can transfer the active call to the monitored user by pressing the BLF List key.

The phone transfers (Blind Transfer or Attended Transfer) the active call differently depending on the Transfer Mode via Dsskey feature configured by your system administrator.

Note: During a call, you can press the BLF List key to select a transfer mode. Check with your system administrator to find out if this feature is available on the phone.

Topics

[Performing a Blind Transfer](#)

[Performing a Semi-attended/Attended Transfer](#)

Performing a Blind Transfer

During a call, you can use the BLF List key to perform a blind transfer to the monitored line.

Before You Begin

Check with your system administrator to make sure that the Transfer Mode via Dsskey is set to **Blind Transfer**.

Procedure

1. During a call, press the BLF List key of the monitored line which you want to transfer this call to.

Performing a Semi-attended/Attended Transfer

During a call, you can use the BLF List key to perform a semi-attended/attended transfer to the monitored line.

Before You Begin

Check with your system administrator if the Transfer Mode via Dsskey is set to **Attended Transfer**.

Procedure

1. During a call, press the BLF List key of the monitored line which you want to transfer this call to.
The phone will dial out the number of the monitored line.
2. Press the BLF List key of the monitored user again or **Transfer (Trans)** to complete the transfer when the monitored user receives ringback or after the monitored user answers the call.

Parking a Call by a BLF List Key

You can use the BLF List key to park a call to the monitored user who is idle.

Before You Begin

Check with your system administrator to find out if this feature is available on your phone.

Procedure

1. During a call, press the desired BLF List key.

Retrieving a Call by a BLF List Key

You can use the BLF List key to retrieve a call that is parked to the monitored line.

Before You Begin

Check with your system administrator to find out if this feature is available on your phone.

Procedure

1. Do one of the following:
 - Press the desired **BLF List** key to retrieve a call that is parked to the monitored line.
 - Long press the BLF List key.
*The **Retrieve**, **Send**, **New Call** and **Cancel** appear on the screen.*
Select **Retrieve** to retrieve the call.

Barging in an Active Call by BLF List Key

You can use the BLF List key to barge in a conversation and set up a conference call.

Before You Begin

Check with your system administrator to find out if this feature is available on your phone.

Procedure

1. Do one of the following:
 - Press the BLF List key.
 - Long press the BLF List key.
*The **Barge In**, **Send**, **New Call** and **Cancel** appear on the screen.*
Select **Barge In**.
The phone dials out the barge-in code followed by the monitored line, and then you can join the call. Each of the three parties can hear the other two parties.

Retrieving a Call Parked to the Monitored Line

When a call is parked to the monitored line, you can retrieve the parked call on the phone.

Before You Begin

Check with your system administrator to find out if Visual Alert for BLF Parked Call Monitor is enabled on your phone.

Procedure

1. Select **Retrieve**.

Shared Line

Yealink phone supports using Shared Call Appearance (SCA) or Bridged Line Appearance (BLA) to share a line. So that this line can be registered on more than one phone at the same time.

Your system administrator can set your phone to use the shared line.

Topics

[State Indicator of Shared Line](#)

[Placing Calls on a Shared Line](#)

[Answering Calls on a Shared Line](#)

[Placing a Call on Public Hold](#)

[Placing a Call on Private Hold](#)

[Retrieving a Held Call on a Shared Line](#)











[Barging in an Active Call on a Shared Line](#)

[Pulling a Shared Call on a Shared Line](#)

State Indicator of Shared Line

You can get the shared line's status by viewing the LED and icon indicator of the shared line key.

The following table shows all kinds of LED and icon indicator associated with the shared line and the corresponding descriptions:

Line Key LED	Icons	Description
	T33P/T33G	
Off		The shared line is idle.
Solid green	 (Monitoring SCA Phone)	The shared line is seized.
Fast-flashing green		The shared line receives an incoming call.
Solid green		The shared line is dialing.
Solid green		The shared line is busy or is in a call.
Slowly-flashing green (local phone) Slowly-flashing red (other phones)		The call on the shared line is placed on public hold.
Slowly-flashing green (local phone) Solid red (other phones)	 (Local SCA Phone)  (Other Phone)	The call on the shared line is placed on private hold.
Solid green		The call on the shared line is barged in by the other shared line user.
Slowly-flashing green		In a multi-party call, place the call on hold locally.

Placing Calls on a Shared Line

You can place one or multiple calls on a shared line.

The phone places a call on the first shared line key automatically. You can select the desired shared line key first and place a call using this key.

Related Topic

[Placing Calls](#)

Answering Calls on a Shared Line

You can answer one or more calls on the shared line.

When an incoming call arrives on the shared line, all the registered phones will ring simultaneously, and the call can be answered on any one of the phones. Incoming calls will be distributed evenly among the available shared line keys.

Note: If the number of incoming calls is greater than the configured line keys, the line keys will be used by sequence circulation. Contact your system administrator for more information.

Related Topic

[Answering Calls](#)

Placing a Call on Public Hold

You can place a call on public hold that any shared line phone can retrieve the held call.

Procedure

1. During a call, select **Hold**.

The call is held on your phone, and all of the phones registered with a shared line show the call is in a held state on the shared line key.

Placing a Call on Private Hold


In the SCA scenario, you can place a call on private hold that only you can retrieve the held call.

The **PriHold** soft key can be preset by your system administrator, you can also set a line key as the private hold key manually if the **PriHold** soft key is not available on your phone. You need to configure a private hold key before you place the call on private hold. Private Hold key is not available on the T30P/T30 phone.

Procedure

1. Go to **Menu > Features > Dsskey**.
2. Select the desired line key.
3. Select **Key Event** from the **Type** field.
4. Select **Private Hold** from the **Key Type** field.
5. (Optional.) Enter the string that will display on the phone screen in the **Label** field.
6. Select **Save**.

Tip: By default, you can long press the desired line key to set it.

During an SCA call, press **PriHold** or Private Hold key on the phone (You may need to press the **More** () soft key to see the **PriHold** soft key). Then the call is held on your phone, and the other phones registered with a shared line show the call is in the busy state on the shared line key. Other users on the shared line cannot resume your held call.

Retrieving a Held Call on a Shared Line

If you place a call on hold on a shared line, you can resume this call at any time. When the shared line key shows a call that is in a held state, you can resume the held call remotely from other user's phone.

Before You Begin

There is at least one call placed on public hold on the shared line.

Procedure

1. Do one of the following:
 - Press the line key.
 - In the SCA scenario, long press the shared line key.
*The **Cancel**, **Call Pull**, **New Call (NewCall)** and **Retrieve** appear on the screen.*
Select **Retrieve** to retrieve the call.

Barging in an Active Call on a Shared Line

In the SCA scenario, you can barge into an active call on the shared line. After you barge into a call, the call turns into a three-party conference.

Note: Only one user can barge into an active call on the shared line at a time.

It is not available on the T30P/T30 phones.

Before You Begin

There is at least one active call on the shared line.

Procedure

1. Long press the desired line key, and then select an active call.
*The **Cancel**, **Call Pull (CallPull)**, **New Call (NewCall)** and **Barge In (BargIn)** appear on the phone screen.*
2. Select **Barge In (BargIn)** to interrupt the active call.

Pulling a Shared Call on a Shared Line

In SCA scenario, both you and other users can pull an existing call from another shared phone that is an active or hold state.

It is not available on the T30P/T30 phone. Check with your system administrator to find out if this feature is available for your phone.

Before You Begin

There is an active or held call on the shared line.

Procedure

1. Long press the line key, and then select a call.
2. Select **Call Pull (CallPull)** to pull the call.

Intercom

Intercom is a useful feature in an office environment to quickly connect with the operator or the secretary.

Intercom enables you to place an intercom call that is answered automatically on the contact's phone as long as the contact is not in an active call.






Note: Intercom is not available on all servers. Contact your system administrator for more information.

Topics

[State Indicator of the Intercom key](#)
[Placing an Intercom Call](#)
[Picking up an Incoming Call of the Target Extension](#)
[Answering an Intercom Call](#)

State Indicator of the Intercom key

On T33P/T33G phones, you can get the intercom status by viewing the icon indicator of the Intercom key.

Icons	Description	Icons	Description
	Target extension is available.		Target extension is ringing.
 Callout	Target extension is dialing.	 Talking	Target extension is busy or is in a call.
	Target extension fails to register.		

Placing an Intercom Call

You can place an intercom call to quickly relay a message to a contact.

The target phone plays a warning tone and automatically answers the call in speakerphone (hands-free) mode by default. When the target phone has an active call, the intercom call is answered automatically after the active call ends.

You can also press the BLF/BLF List key to initiate an outgoing intercom call to the monitored user. Check with your system administrator to find out if it is available on your phone.

Before You Begin

If you are using the T30P/T30 phones, check with your system administrator if the Intercom key has set for your phone.

Procedure

1. Go to **Menu > Features > Dsskey**.
2. Select the desired line key.
3. Select **Intercom** from the **Type** field.
4. Select the desired line from the **Account ID** field.
5. Do one of the following:
 - (Optional.) Enter the string that will appear on the phone screen in the **Label** field.
Enter the target extension number in the **Value** field.
 - On the T33P/T33G phones, highlight the **Label** or **Value** field. Select **Directory (Dir)** and select the desired contact from the Directory list.
6. Select **Save**.
7. Press the Intercom key to place an intercom call.

Tip: By default, you can long press the desired line key to set it.

Related Topic

[Setting a BLF Key](#)

Picking up an Incoming Call of the Target Extension

You can pick up the target extension's incoming call by pressing the Intercom key.

Before picking up an incoming call, make sure that the directed call pickup code has been configured either for an Intercom key or for Call Pickup feature in advance.

Check with your system administrator to find out if this feature is available on your phone.

Note: If the directed call pickup code is not set, the phone will place a call to the target extension instead of picking up an incoming call of the target extension when you press the Intercom key.

Before You Begin

Get the directed call pickup code from your system administrator.

Procedure

1. Long press the Intercom key.
2. Enter the directed call pickup code in the **Extension** field.
3. Select **Save**.

When the target extension receives an incoming call, the Intercom key LED of the target extension will flash green. Press the Intercom key to pick up the incoming call directly.

Answering an Intercom Call

By default, when there is an incoming intercom call, the phone plays a warning tone and automatically answer the incoming call.

During the intercom call, you can switch among the Speakerphone (hands-free), Handset and headset modes. If your phone is set to answer intercom calls with your microphone muted, you need to press the Mute key to unmute your microphone before responding to the call.

You can configure the following behaviors when receiving an intercom call.

Intercom Allow

Intercom Allow feature allows the phone to automatically answer an incoming intercom call. If you disable this feature, the phone will handle an incoming intercom call like a normal incoming call.

Note: Your system administrator can set a period of delay time before the phone automatically answers intercom calls.

Intercom Mute

Intercom Mute feature allows the phone to mute the microphone when incoming intercom calls are answered automatically.

Intercom Tone

Intercom Tone feature allows the phone to play a warning tone before answering an intercom call automatically.

Intercom Barge

Intercom Barge allows the phone to automatically answer an incoming intercom call while an active call is in progress. The active call will be placed on hold. If you disable this feature, the phone will handle an incoming intercom call like a normal incoming call while there is already an active call on the phone.

Note: To enable the phone to receive a new incoming call when it already has an active call, make sure that the call waiting feature is enabled on the phone in advance.

Procedure

1. Go to **Menu > Features > Intercom**.
2. Make the desired changes.
3. Select **Save**.

Related Topics

[Switching Among the Handset, Speakerphone and Headset Modes](#)
[Muting/Unmuting Audio](#)
[Answering a Call When in a Call](#)

Short Message Service (SMS)

Text messages can be stored in your phone's Inbox, Sentbox, Outbox or Draftbox, and each box stores up to 100 text messages.

If there are more than 100 text messages in any one of the boxes, the phone will directly delete the oldest text message in the box.

Note: SMS is not available on all servers. Contact your system administrator for more information.

Topics

[Reading a Text Message](#)
[Sending a Text Message](#)
[Replying to a Text Message](#)
[Deleting a Text Message](#)

Reading a Text Message

You can read your text messages on the phone, to obtain text information sent by a contact.

Procedure

1. Go to **Menu > Message > Text Message > Inbox**.
2. Highlight the desired message and select **View**.

Tip: If the phone prompts you there is a new text message, you can select the **View** soft key to read the new messages directly. But your system administrator can disable the prompt box for the new message(s)

Sending a Text Message

The phones can send text messages.

Procedure

1. Go to **Menu > Message > Text Message > New Message**.
2. Compose the new text message.
3. Select the desired account from the **From** field.
4. Do one of the following:
 - Enter the number you want to send the message to in the **To** field.
 - On the T33P/T33G phones, highlight the **To** field. Select **Directory (Dir)** and select the desired contact from the Directory list.
5. Send the message.

Replying to a Text Message

You can reply to a message after reading a text message.

Procedure

1. Go to **Menu > Message > Text Message > Inbox**.
2. Highlight the desired message and select **Reply**.
3. Compose the new text message.
4. Select **Send**.

Deleting a Text Message

You can delete messages from your phone after reading.

Procedure

1. Go to **Menu > Message > Text Message > Inbox (Sentbox, Outbox or Draftbox)**.
2. Highlight the desired message.
3. Select **Option > Delete**.
The phone prompts you to delete the message or not.
4. Select **OK**.

You can also delete all text messages by selecting the **Delete All**.

Voice Mail

Voice Mail feature allows you to leave voice mails for someone or listen to your voice mail messages on your IP phones.

This feature is set up on the server-side and not all servers support this feature.

Topics

[Setting the Voice Mail Code](#)

[Leaving Voice Mails](#)

[Listening to Voice Mails](#)

Setting the Voice Mail Code

If you want to connect your phone to the message center, you need to set the voice mail code on your phone.

Before You Begin

Get the voice mail code from your system administrator.

Procedure

1. Go to **Menu > Message > Voice Mail > Set Voice Mail Code**.
You can also press the MESSAGE key when the voice mail code is not configured.
2. Enter the voice mail code (for example, *4) in the desired account field.
3. Select **Save**.

Leaving Voice Mails

You can leave a voice mail to someone who is busy or inconvenient to answer the call.

Procedure

1. Follow the voice prompts to leave a voice mail.
2. Hang up to complete the voice mail.

Listening to Voice Mails

You can listen to your voice mails on the phone, to obtain voice information sent by a contact.

Before You Begin

You need to set the voice mail code in advance.

Procedure

1. Go to **Menu > Message > Voice Mail > View Voice Mail**.
The phone screen displays the amount of new and old voice mails.

2. Highlight an account, and then select **Connect**.
3. Follow the voice prompt to listen to your voice mails.

Tip: When the phone prompts that the phone receives a new voice mail, you can press the MESSAGE key or **Connect** soft key to dial out the voice mail access code directly.

Related Topic

[Setting the Voice Mail Code](#)

Using the Hot Desking

You can use hot desking to log out from the current account and then log in to a new account. So many users can share one phone resource at different times.

Note: Hot desking is not available on all servers. Contact your system administrator for more information.

Before You Begin

Your system administrator has set a Hot Desking key for you to use this feature. Get the login account information from your system administrator.

Procedure

1. Press the Hot Desking key when the phone is idle.
The phone prompts you to clear the account configuration or not.
2. Select **OK**.
*Registration configurations of all accounts on the phone will be cleared immediately.
The login wizard will be displayed.*
3. Enter the login information.
4. Select **Save**.

Automatic Call Distribution (ACD)

ACD is often used in offices for customer service, such as call center.

The ACD system handles large volumes of incoming calls from callers who have no need to talk to a specific person but who require assistance from any of multiple persons at the earliest opportunity. ACD on all IP phones allows the ACD system to distribute large volumes of incoming calls to the registered ACD users.

ACD is not available by default. Check with your system administrator to find out if this feature is available on your phone.



Topics







[State Indicator of ACD User](#)
[Logging into the ACD System](#)
[Changing the ACD Status](#)

State Indicator of ACD User

You can get the ACD user's status by viewing the line key LED and icon indicator of the ACD key.

The state indicator of the ACD key varies by phone models.

Line key LED Status	Icons		Description
	T31P/T31G/T31	T33P/T33G	
Off			Log out

Line key LED Status	Icons		Description
	T31P/T31G/T31	T33P/T33G	
Solid green			Available/Log in
Solid red			Wrap up
Fast-flashing green	 x		Unavailable

Logging into the ACD System

After logging into your ACD account, you are ready to receive calls from the ACD system.

Before You Begin

Your system administrator has set an ACD key for you to log into the ACD system. Get your ACD account information from your system administrator.

Procedure

1. Press the ACD key when the phone is idle.
2. Enter your ACD account information.
3. Select **Login**.

Changing the ACD Status

You can press the ACD key to change your current ACD user status.

Procedure

1. Select **Available (Avail)/Unavailable (Unavail)**.
ACD user status synchronizes on both the phone and ACD system.
2. To log out of the ACD system, select **Logout**.

Directory

The phone provides several types of phone directories, which can be customized by your system administrator.

Topics

[Local Directory](#)
[Favorites](#)
[Blacklist](#)
[Google Contacts](#)
[Remote Phone Book](#)

Local Directory

You can store up to 1000 contacts and 48 groups in your local directory, you can search, add, edit and delete a contact.

Note: You can back up the Local Directory to the provisioning server. For more information, contact your system administrator.

Topics

[Managing the Local Directory Groups](#)
[Managing the Local Directory Contacts](#)
[Moving a Local Directory Contact to Blacklist](#)
[Searching for Contacts](#)

Managing the Local Directory Groups

You can manage the Local Directory groups when the phone is idle.

Topics

[Adding Contact Groups](#)
[Editing Contact Groups](#)
[Deleting Contact Groups](#)

Adding Contact Groups

To organize your contacts and make them easier to find, you can add additional groups in the Local Directory.

Procedure

1. Select **Directory (Dir)** or go to **Menu > Directory > Local Directory**.
2. Select **Add Group (Add Gro)**.
3. Enter the desired group name.
4. Select **Save**.

Editing Contact Groups

You can change or add the group's information.

Procedure

1. Select **Directory (Dir)** or go to **Menu > Directory > Local Directory**.
2. Highlight the desired group.
3. Select **Option > Detail**.
4. Edit the group information.
5. Select **Save**.

Deleting Contact Groups

When you delete a contact group, the contacts in the group will not be deleted. You can view the contacts in **All Contacts** list.

Procedure

1. Select **Directory (Dir)** or go to **Menu > Directory > Local Directory**.
2. Highlight the desired group.
3. Select **Option > Delete**.
The phone prompts you to delete the group or not.
4. Select **OK**.

Managing the Local Directory Contacts

You can manage the Local Directory contacts when the phone is idle.

Topics

- [Adding Contacts](#)
- [Viewing Contacts](#)
- [Editing Contacts](#)
- [Deleting a Contact](#)
- [Deleting All Contacts](#)

Adding Contacts

When you add a contact to your Local Directory, you can choose how much information you want to enter for your contact. You are required to enter a contact name at least for each new contact.

Procedure

1. Select **Directory (Dir)** or go to **Menu > Directory > Local Directory**.
2. Select the desired contact group or **All Contacts**.
3. Select **Add**.
4. Enter your contact's information.
5. Select the desired account from the **Account** field.
6. On the T33P/T33G phones, select the desired photo from the **Photo** field.

Viewing Contacts

You can view the local contacts from the Local Directory on your phone.

Procedure

1. Select **Directory (Dir)** or go to **Menu > Directory > Local Directory**.
2. Select the desired contact group or **All Contacts**.
The contact names are displayed in alphabetical order.

Editing Contacts

You can update your contacts' information.

Procedure

1. Select **Directory (Dir)** or go to **Menu > Directory > Local Directory**.
2. Select the desired contact group or **All Contacts**.
3. Highlight the desired contact, and select **Option > Detail**.
4. Edit the contact information.
5. Select **Save**.

Deleting a Contact

You can delete any contact from the Local Directory.

Procedure

1. Select **Directory (Dir)** or go to **Menu > Directory > Local Directory**.
2. Select the desired contact group or **All Contacts**.
3. Highlight the desired contact, and select **Option > Delete**.
The phone prompts you to delete the contact or not.
4. Select **OK**.

Note: If the contact added to the Favorites directory is deleted in the Local Directory, it will be automatically deleted from the Favorites directory.

Deleting All Contacts

You can delete all contacts from the Local Directory.

Procedure

1. Select **Directory (Dir)** or go to **Menu > Directory > Local Directory**.
2. Select the desired contact group or **All Contacts**.
3. Select **Option > Delete All**.
The phone prompts you to delete all contacts or not.
4. Select **OK**.

Note: If the contact added to the Favorites directory is deleted in the Local Directory, it will be automatically deleted from the Favorites directory.

Moving a Local Directory Contact to Blacklist

You can move a contact in the Local Directory to blacklist. Incoming calls from this contact will be rejected automatically.

Procedure

1. Select **Directory (Dir)** or go to **Menu > Directory > Local Directory**.
2. Select the desired contact group or **All Contacts**.
3. Highlight the desired contact, and select **Option > Add to Blacklist**.
The phone prompts you to move to the blacklist or not.
4. Select **OK**.

Searching for Contacts

In the Local Directory, you can enter search criteria to find your desired contact quickly.

Procedure

1. Select **Directory** or go to **Menu > Directory > Local Directory**.
2. Select **Search**.
3. Enter your search criteria in the search field.

Favorites

Favorites are the contacts in your Local Directory that you call most often.

If your system administrator has enabled this feature for you, you can add contacts as favorites, view favorites on the idle screen, reorder favorites, and delete favorites.

Topics

- [Adding Favorites](#)
- [Viewing Favorites](#)
- [Reordering Favorites](#)
- [Deleting Favorites](#)

Adding Favorites

After adding a contact as a favorite, your phone will automatically assign a Speed Dial key for it. You can quickly dial a contact using the Speed Dial key on the idle screen.

On all IP phones except the black-and-white screen phones, a star is displayed in the Local Directory for a contact saved as the favorite.

Topics

- [Adding an Existing Contact to Your Favorites](#)
- [Adding a New Contact to Your Favorites](#)

Adding an Existing Contact to Your Favorites

You can add an existing contact as a favorite from the Local Directory.

Procedure

1. Select **Directory (Dir)** or go to **Menu > Directory > Local Directory**.
2. Select the desired contact group or **All Contacts**.
3. Highlight the desired contact and select **Option**.
4. Select **Copy to Favorites**.

The phone prompts you to automatically accept the next available index number or manually enter your own.

5. Select **OK** to automatically accept an index number or select **Edit** to enter an index number (1-999999999).

Adding a New Contact to Your Favorites

You can add a new contact as a favorite by designating an index number.

Procedure

1. Select **Directory (Dir)** or go to **Menu > Directory > Local Directory**.
2. Select the desired contact group or **All Contacts**.
3. Select **Add**.
4. Enter the contact information.
5. Enter the desired index number (1-999999999) in the **Favorite Index** field.
6. Select **Save**.

Tip: To quickly add a favorite, long press the desired line key to enter the Add Contact screen. Check with your system administrator to find out if this feature is available on your phone.

Viewing Favorites

You can view a list of favorites in the Favorites directory.

Procedure

1. Go to **Menu > Directory > Favorites**.

Reordering Favorites

You can reorder favorites to change the display order in the Favorite.

Procedure

1. Go to **Menu > Directory > Favorites**.

2. Highlight the desired contact, and select **Option > Detail**.
3. Enter a new index number in the **Favorites Index** field.
4. Select **Save**.

Deleting Favorites

You can delete favorites to make room for new favorites.

Procedure

1. Go to **Menu > Directory > Favorites**.
2. Highlight the desired contact, and then select **Option > Detail**.
3. Delete the favorite index number in the **Favorites Index** field.
4. Select **Save**.

The contact is removed from Favorites directory, while it still remains in your Local Directory.

Tip: You can also delete a favorite by selecting **Option > Remove from Favorites**.

Blacklist

Incoming calls from the Blacklist are rejected automatically. You can store up to 30 contacts in the blacklist to block unwanted callers.

Topics

- [Adding a Blacklist Contact](#)
- [Viewing Blacklist Contacts](#)
- [Editing a Blacklist Contact](#)
- [Deleting Blacklist Contacts](#)
- [Moving a Blacklist Contact to the Local Directory](#)

Adding a Blacklist Contact

You can add a blacklist contact on the phone to prevent someone from calling you.

Procedure

1. Go to **Menu > Directory > Blacklist**.
2. Select **Add**.
3. Enter the blacklist contact's information.
4. Select **Save**.

Viewing Blacklist Contacts

You can view the blacklist contacts from the Blacklist on your phone.

Procedure

1. Go to **Menu > Directory > Blacklist**.

Editing a Blacklist Contact

You can update your blacklist contacts' information.

Procedure

1. Go to **Menu > Directory > Blacklist**.
2. Highlight the desired blacklist contact, and select **Option > Detail**.
3. Edit the blacklist contact information.
4. Select **Save**.

Deleting Blacklist Contacts

You can delete one or all blacklist contacts. If a contact is removed from the blacklist, you can answer the call from the contact normally.

Topics

[Deleting a Blacklist Contact](#)

[Deleting All Blacklist Contacts](#)

Deleting a Blacklist Contact

If you want to answer a call from a specific contact, you need to remove it from the Blacklist.

Procedure

1. Go to **Menu > Directory > Blacklist**.
2. Select the desired blacklist contact.
3. Select **Option > Delete**.

The phone prompts you to delete the contact or not.

4. Select **OK**.

Deleting All Blacklist Contacts

You can delete all contacts from the Blacklist when you are ready to answer calls from them again.

Procedure

1. Go to **Menu > Directory > Blacklist**.
2. Select **Option > Delete All**.

The phone prompts you to delete all contacts or not.

3. Select **OK**.

Moving a Blacklist Contact to the Local Directory

You can move a blacklist contact to a Local Directory. Incoming calls from this contact will not be rejected automatically.

Procedure

1. Go to **Menu > Directory > Blacklist**.
2. Highlight the desired contact, and then select **Option**.
3. Select **Add to Contacts**.

The phone prompts you to move to contact or not.

4. Select **OK**.

Google Contacts

If the Google Contacts feature has been enabled by your system administrator, you can access the Google Contacts, which lists contacts and groups within your Google account.

Topics

[Viewing Google Contacts](#)

[Updating Google Contacts](#)

[Searching for Google Contacts](#)

Viewing Google Contacts

You can view Google contacts on your phone.

Procedure

1. Go to **Menu > Directory > Google Contact**.

Updating Google Contacts

The Google contacts may be updated on the Google Contact Server, you can update Google contacts on your phone to get the newest Google contacts.

Procedure

1. Go to **Menu > Directory > Google Contact**.
2. Select **Update**.

Searching for Google Contacts

You can enter search criteria to find your desired Google contacts quickly.

Procedure

1. Go to **Menu > Directory > Google Contact**.
2. Enter the search criteria.

The contacts whose name or phone number matches the search criteria will be displayed in the result list.

Remote Phone Book

If the Remote Phone Book feature has been enabled by your system administrator, you can access your corporate directory directly from your phone.

Topics

[Searching for Remote Phone Book Contacts](#)

[Viewing Remote Phone Book Contacts](#)

[Saving a Remote Phone Book Contact to the Local Directory](#)

[Saving a Remote Phone Book Contact to the Blacklist](#)

Searching for Remote Phone Book Contacts

In the Remote Phone Book, you can enter search criteria to find your desired contact quickly.

Note: You can only search the contact name or contact numbers, search criteria do not include extra information on the contact.

Procedure

1. Go to **Menu > Directory > Remote Phone Book**.
2. Select the desired remote phone book.
3. Select **Search**.
4. Enter your search criteria in the search field.

Viewing Remote Phone Book Contacts

You can view the contact list of the remote phone book on your phone.

Procedure

1. Go to **Menu > Directory > Remote Phone Book**.

Saving a Remote Phone Book Contact to the Local Directory

You can save any remote phone book contact to the Local Directory, to conveniently call this contact when you cannot access the remote phone book.

Procedure

1. Go to **Menu > Directory > Remote Phone Book**.
2. Select the desired remote phone book.
3. Highlight the desired contact, and then select **Option > Add to Contacts**.
4. Edit the corresponding fields.
5. Select **Save**.

Saving a Remote Phone Book Contact to the Blacklist

You can save any remote phone book contact to the Blacklist on the phone, to prevent this contact from calling you.

Procedure

1. Go to **Menu > Directory > Remote Phone Book**.
2. Select the desired remote phone book.
3. Highlight the desired contact and select **Option > Add to Blacklist**.
4. Edit the contact information.
5. Select **Save**.

Call History

The call history list includes Missed Calls, Placed Calls, Received Calls and Forwarded Calls, and each list holds 100 entries.

Topics

[Call History Icons](#)

[Viewing History Records](#)

[Saving a History Record to Local Directory](#)

[Saving a History Record to Blacklist](#)





[Deleting History Records](#)

[Disabling History Record](#)





Call History Icons

Each icon in the Call History indicates the corresponding call history status.

For T33P/T33G phones:

Icons	Description	Icons	Description
	Received Call		Missed Call
	Placed Call		Forwarded Call

For T31P/T31G/T31/T30P/T30 phones:

Icons	Description	Icons	Description
	Received Call		Missed Call
	Placed Call		Forwarded Call

Viewing History Records

The history record saves the call information such as the caller's name and number, local line and call duration.

Procedure

1. Press **History** or go to **Menu > History**.
2. Select the desired list.
3. Select the desired entry.
4. Select **Option > Detail**.

Saving a History Record to Local Directory

To identify someone's call the next time, you can save a history record to the Local Directory.

Procedure

1. Select **History** or go to **Menu > History**.
2. Highlight the desired entry, and select **Option > Add to Contacts**.
3. Edit the contact information.
4. Select **Save**.

Saving a History Record to Blacklist

You can prevent someone from calling you again by saving a history record to Blacklist.

Procedure

1. Select **History** or go to **Menu > History**.
2. Select the desired list.
3. Highlight the desired entry, and select **Option > Add to Blacklist**.
4. Edit the contact information.
5. Select **Save**.

Deleting History Records

You can delete one or all call records from the call history list.

Topics

- [Deleting a Call Record](#)
- [Deleting All Call Records](#)

Deleting a Call Record

You can delete any call record from the call history list.

Procedure

1. Press **History** or go to **Menu > History**.
2. Select the desired list.
3. Highlight the desired entry, and select **Delete**.

Deleting All Call Records

You can delete all call records from the call history list.

Procedure

1. Press **History** or go to **Menu > History**.
2. Select the desired list.
3. Select **Option > Delete All**.
The phone prompts you to delete all the records or not.
4. Select **OK**.

Disabling History Record

If you disable history record, you cannot save any call log on the phone.

Procedure

1. Go to **Menu > Features > History Settings**.
On the T33P/T33G phones, go to **Menu > Features > Others > General**.
2. Select **Disabled** from the **History Record** field.
3. Select **Save**.

Customizing Your Phone

You can make your phone more personalized by customizing various settings.

Topics

[Changing the Administrator Password](#)

[Wallpaper](#)

[Screen Saver](#)

[Changing the Backlight and Time](#)

[Adjusting the Screen Contrast](#)

[Changing the Language](#)

[Time & Date](#)

[Setting a Key as Send](#)

[Customizing the Soft Keys](#)

[Phone Lock](#)

[Extending the Line Key Labels](#)

[Locking the Line Key](#)

Changing the Administrator Password

By default, you require an administrator password to access the **Advanced/Advanced Settings** menu. The default password is “admin”. For security reasons, you should change the default password as soon as possible.

Note: If you do not change the default password, the phone displays a warning icon in the status bar.

Procedure

1. Go to **Menu > Settings > Advanced Settings > Change Password**.
On the T33P/T33G phones, go to **Menu > Advanced > Change Password**.
2. Enter your old and new password information.
3. Select **Save**.

Related Topic

[Warnings](#)

Wallpaper

You can change the background picture that is displayed on your phone.

The phone comes with a default background picture, you can change it to another built-in picture. You can also use a custom picture uploaded by your system administrator as the wallpaper.

Only T33P/T33G phones support wallpaper.

Topics

[Changing Wallpaper on Idle Screen](#)

Changing Wallpaper on Idle Screen

You can set one of your pictures as the background image on your phone's idle screen.

Procedure

1. Go to **Menu > Basic > Display > Wallpaper**.
2. Select the desired image.

3. Select **Save**.

Screen Saver

The screen saver starts automatically when your phone has been idle for the preset waiting time. You can stop the screen saver by pressing any key.

Topics

[Changing the Waiting Time for Screen Saver](#)
[Disabling Time & Date and Status Icons Display](#)
[Setting the Screen Saver Type](#)

Changing the Waiting Time for Screen Saver

You can set the waiting time after no activity before displaying the screen saver.

Procedure

1. Go to **Menu > Settings > Basic Settings > Display > Screensaver**.
On the T33P/T33G phones, go to **Menu > Basic > Display > Screensaver**.
2. Select the desired waiting time from the **Wait Time** field.
3. Select **Save**.

Disabling Time & Date and Status Icons Display

For the T33P/T33G phones, you can disable your phone to display time, date and status icons on the screen saver.

The Time & Date and status icons display on the screen saver, as shown below:



Note: You cannot configure Time & Date and status icons display if your system administrator has set your phone to display custom information on the screen saver.

Procedure

1. Go to **Menu > Basic > Display > Screensaver**.
2. Select **Disabled** from the **Display Clock** field.
3. Select **Save**.

Setting the Screen Saver Type

The screen saver can start with different types and you can set it manually.

you can choose one of the following screen saver types:

- System
- Custom
- Server XML (shows custom information on the screen saver)

The phones can only display custom information that is preset by your system administrator as the screen saver.

Before You Begin

If you want to set a custom picture as the screen saver, make sure that the custom picture has been uploaded by your system administrator.

If you want to show custom information on the screen saver, make sure that the custom information has set by your system administrator.

Procedure

1. Go to **Menu > Basic > Display > Screensaver**.
2. Select the desired screen saver type from the **Screensaver Type** field.
 - If you select **System**.
The phone automatically sets the built-in picture as the screen saver.
 - If you select **Custom**.
The phone automatically set the custom pictures as the screen saver, and display these pictures alternately.
 - If you select **Server XML**.
The phone automatically displays the custom information (for example, notifications or company logo) on the screen saver.
3. Select **Save**.

Changing the Backlight and Time

You can change the brightness of the phone screen during phone activity and inactivity. The brightness automatically changes after the phone has been idle for a specified time. It is not available for the T30P/T30 phone.

You can change the screen backlight and time in the following settings:

Active Level: The brightness level of the phone screen when the phone is active. Digits 1 to 10 represent different brightness levels. 10 is the brightest level.

Inactive Level: The brightness of the phone screen when the phone is inactive. You can select a low brightness or turn off the backlight. It is only available for the T33P/T33G phones.

Backlight Time: The delay time to change the brightness of the phone screen when the phone is inactive. Backlight time includes the following settings:

- **Always On:** Backlight is on permanently.
- **Always Off:** Backlight is off permanently. It is not available for the T33P/T33G phone.
- **15s, 30s, 1 min, 2min, 5min, 10min or 30min:** Backlight is changed when the phone is inactive after the designated time.

Procedure

1. Go to **Menu > Settings > Basic Settings > Display > Backlight**.
On the T33P/T33G phones, go to **Menu > Basic > Display > Backlight**.
2. Select the desired level from the **Active Level** field.
3. On the T33P/T33G phones, select the desired level from the **Inactive Level** field.
4. Select the desired time from the **Backlight Time** field.
5. Select **Save**.

Adjusting the Screen Contrast

You can adjust the screen contrast of the phone to make it easier to read.

The intensity of screen contrast ranges from 1 to 10 and the highest intensity is 10. It is not available on the T33P/T33G phones.

Procedure

1. Go to **Menu > Settings > Basic Settings > Display > Contrast**.
2. Select the desired value from the **Contrast** field.
3. Select **Save**.

Changing the Language

Your phone supports several languages that you can choose to use on the phone.

Contact your system administrator to find out exactly which languages are supported on your phone.

Procedure

1. Go to **Menu > Settings > Basic Settings > Language**.
On the T33P/T33G phones, go to **Menu > Basic > Language**.
2. Select the desired language.
3. Select **Save**.

The phone language is changed to the selected one.

Time & Date

You can set the time and date manually. The time and date formats are also variable.

Topics

[Setting the Time and Date Manually](#)
[Changing the Time and Date Format](#)

Setting the Time and Date Manually

If your phone cannot obtain the time and date automatically, you can set it manually.

Procedure

1. Go to **Menu > Settings > Basic Settings > Time & Date > Manual Settings**.
On the T33P/T33G phones, go to **Menu > Basic > Time & Date > General > Manual Settings**.
2. Edit the date and time.
3. Select **Save**.

The time and date set on the phone will be changed accordingly.

Note: After the phone reboots, it will be forcibly switched to obtain the time and date from the NTP server.

Changing the Time and Date Format

You can set the phone to display the time in 12-hour format or 24-hour format. You can also change the date format, including the options to display the day (D), month (M), and year (Y).

Note: Your system administrator can customize the date format.

Procedure

1. Go to **Menu > Settings > Basic Settings > Time & Date > Time & Date Format**.
On the T33P/T33G phones, go to **Menu > Basic > Time & Date > Time & Date Format**.

2. Select the desired time format or date format.
3. Select **Save**.

Setting a Key as Send

The pound key (#) is used as the send key by default. To type a phone number followed by the pound key (#), you can set the send key to the star key (*).

You can also disable “#” and “*” to be used as the send key.

Procedure

1. Go to **Menu > Features > Key As Send**.
On the T33P/T33G phones, go to **Menu > Features > Others > General**.
2. Select the desired value from the **Key As Send** field.
3. Select **Save**.

Customizing the Soft Keys

You can customize the function of the soft keys displayed on the bottom of the idle screen for all IP phones except the T33P/T33G phones.

The soft keys are typically used to access frequently used functions, and to create menu shortcuts to access frequently used phone settings. The soft keys perform the same functions as the hard keys.

Caution: We recommend that you keep a **Menu** soft key, otherwise you cannot access the phone settings.

Procedure

1. Go to **Menu > Settings > Advanced Settings** (default password: admin) > **Softkey Label**.
2. Select the desired soft key.
3. Select the desired key type from the **Type** field.
4. (Optional.) Select the desired line from the **Account ID** field.
5. (Optional.) Enter the string that will appear on the phone screen in the **Label** field.
6. (Optional.) Enter the corresponding value in the **Value** field.
7. Select **Save**.

Phone Lock

Phone lock helps you protect your phone from unauthorized use.

Topics

[Setting the Phone Lock](#)
[Locking Your Phone Manually](#)
[Unlocking Your Phone](#)
[Changing Your Phone Unlock PIN](#)

Setting the Phone Lock

You can manually lock the phone or wait a specified time to automatically lock the phone.

What unauthorized users can do depends on the settings of the phone lock type.

The phone supports the following phone lock types:

- **Menu key:** it prevents unauthorized users from accessing the menu, changing the personal settings for your phone.

- **Function key:** it only allows users to use the keypad for placing a call, answering or rejecting an incoming call and ending a call, and it prevents unauthorized users from other operations.
- **All keys:** it only allows users to use the keypad for dialing an emergency number or authorized numbers that set up by your system administrator, answering or rejecting an incoming call and ending a call, and it prevents unauthorized users from other operations. The phones only support All Keys type of phone lock.

Note: The Volume key, HEADSET key and Speakerphone key are always available when you lock the phone.

Procedure

1. Go to **Menu > Settings > Basic Settings > Phone Lock**.
On the T33P/T33G phones, go to **Menu > Basic > Phone Lock**.
2. Enter the desired PIN (default PIN: 123) in the **Unlock PIN** field.
3. Select **OK**.
4. Select **Enabled** from the **Lock Enable** field.
5. the desired type from the **Lock Type** field.
6. Enter the desired interval (0 - 3600 seconds) in the **Auto Lock** field.
If the value is set to 0, the phone will not be automatically locked.
7. Select **Save**.

Locking Your Phone Manually

You can lock the phone manually before the phone is automatically locked.

Before You Begin

Make sure that the phone lock is set.

Procedure

1. Long press # key when the phone is idle.
The lock icon appears on the phone screen.

Related Topic

[Setting the Phone Lock](#)

Unlocking Your Phone

You can use an unlock PIN to unlock the phone.

If you forget the unlock PIN, you can enter the administrator password to unlock your phone, and then automatically access the PIN change screen.

Procedure

1. Press any locked key, the phone prompts you to enter an unlock PIN.
2. Enter the desired PIN (default: 123) in the **Unlock PIN** field.
3. Select **OK**.
The lock icon disappears from the phone screen.

Changing Your Phone Unlock PIN

The default unlock PIN is "123". For security reasons, you should change the default unlock PIN as soon as possible.

Procedure


1. Go to **Menu > Settings > Basic Settings > Change PIN**.

- On the T33P/T33G phones, go to **Menu > Basic > Change PIN**.
2. Enter your old and new unlock PIN respectively.
The unlock PIN length must be within 15 digits.
 3. Select **Save**.


Extending the Line Key Labels

On the T33P/T33G phones, you can extend when the phone is placing a call or during the call.

Before you extend the line key labels:

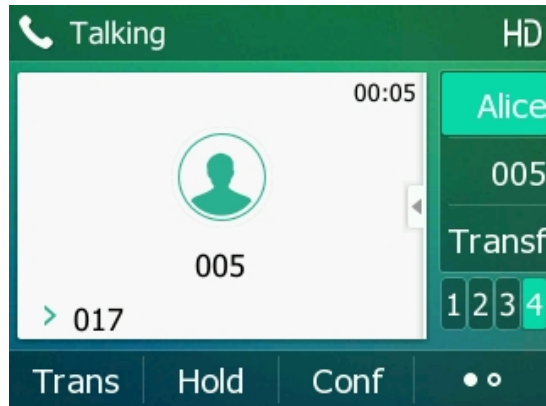

After you extend the line key labels:

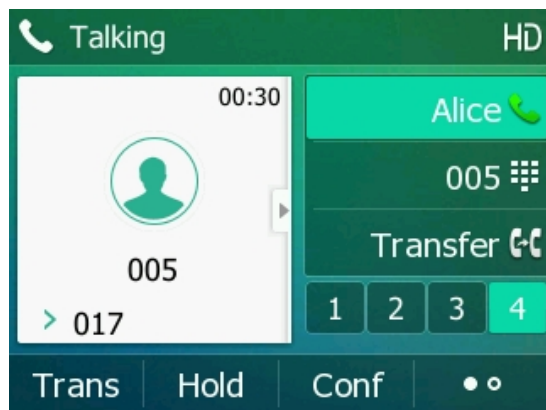

Procedure


1. Press the left navigation key.
You can press the right navigation key to shrink the line key labels.

Locking the Line Key

On the T33P/T33G phones, you can make a Line key locate in the same position of different pages. Then you can use this Line key on every page to accept incoming calls.

For T33P/T33G, this feature is only applicable to line key 1-3.

The following figure shows that Line key 1 is locked in the same position on each page:

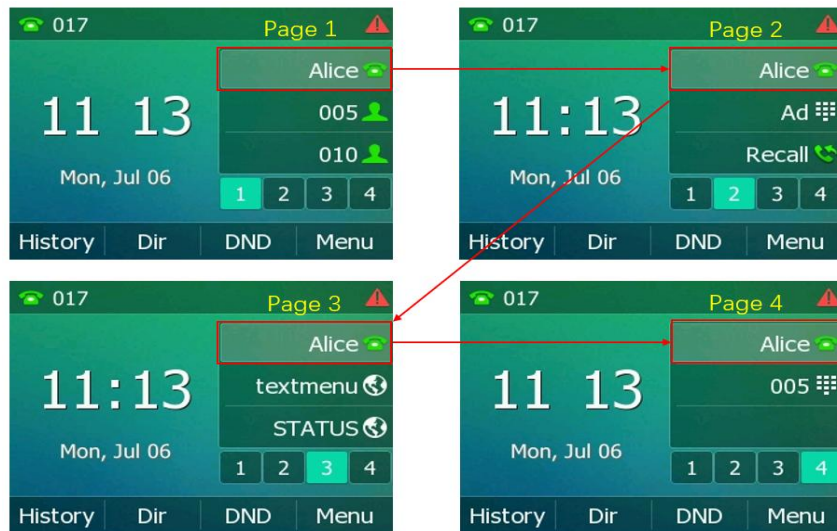

Procedure

1. Go to **Menu > Features > Dsskey**.
2. Select the desired line key.
3. Select **Line** from the **Type** field.
4. Select the desired line from the **Account ID** field.
5. (Optional.) Enter the string that will appear on the phone screen in the **Label** field.
6. Select **Lock** from the **Value** field.
7. Select **Save**.

Related Topic

[Idle Screen](#)

Audio Settings

You can change the basic audio settings on your phone.

Topics

[Adjusting the Volume](#)
[Setting the Ring Tone](#)
[Disabling the Key Tone](#)
[Muting the Ringtone](#)

Adjusting the Volume

You can adjust the volume of the ringer, media, and audio during a call.

Procedure

1. Press the Volume key.

Setting the Ring Tone

You can set distinctive ring tones for groups or contacts in your Local Directory so that you can identify the caller when your phone rings.

The ring tones are used according to this priority: Contact ring tone>Group ring tone>Account ring tone >Phone ring tone.

Topics

[Setting a Ring Tone for the Phone](#)
[Setting a Ring Tone for an Account](#)
[Setting a Ring Tone for a Group](#)
[Setting a Ring Tone for a Contact](#)

Setting a Ring Tone for the Phone

You can choose a ring tone for all incoming calls.

Procedure

1. Go to **Menu > Settings > Basic Settings > Sound > Ring Tones > Common**.
On the T33P/T33G phones, go to **Menu > Basic > Sound > Ring Tones > Common**.
2. Select the desired ring tone.
3. Select **Save**.

Setting a Ring Tone for an Account

You can select a unique ring tone for an individual account.

Procedure

1. Go to **Menu > Settings > Basic Settings > Sound > Ring Tones**.
On the T33P/T33G phones, go to **Menu > Basic > Sound > Ring Tones**.
2. Select the desired account.
3. Select the desired ring tone.
*If **Common** is selected, this account will use the ring tone selected for the phone.*
4. Select **Save**.

Setting a Ring Tone for a Group

You can select a unique ring tone for various groups in your Local Directory.

Note: You can only set a ring tone for a group that is added manually.

Procedure

1. Select **Directory (Dir)** or go to **Menu > Directory > Local Directory**.
2. Highlight the desired group.
3. Select **Option > Detail**.
4. Select the desired ring tone from the **Ring** field.

If **Auto** is selected, this group uses the ring tone according to the default priority.

If a specific ring tone is selected, this group uses the ring tone according to the priority: Contact ring tone>Group ring tone.

5. Select **Save**.

Setting a Ring Tone for a Contact

You can select a unique ring tone for various contacts in your Local Directory. This helps you quickly identify callers according to the ring tones.

Procedure

1. Select **Directory (Dir)** or go to **Menu > Directory > Local Directory**.
2. Select the desired contact group or **All Contacts**.
3. Highlight the desired contact, and select **Option > Detail**.
4. Select the desired ring tone from the **Ring** field.

*If **Auto** is selected, the contact uses the ring tone according to the default priority.*

5. Select **Save**.

Disabling the Key Tone

If you disable the key tone, the phone will not produce a sound when pressing the keypad keys.

Procedure

1. Go to **Menu > Settings > Basic Settings > Sound > Key Tone**.
On the T33P/T33G phones, go to **Menu > Basic > Sound > Key Tone**.
2. Turn off **Key Tone**.
3. Select **Save**.

Muting the Ringtone

You can mute the ringtone of incoming calls on the idle screen.

Procedure

1. Long press the MUTE key for 2 seconds on the idle screen.
2. Long press the MUTE key again to unmute the ringtone.

Maintaining Your Phone

When your phone is unable to operate properly, you need to investigate or troubleshoot issues along with other tasks your system administrator may ask you to perform.

Topics

[Warnings](#)

[Diagnosing the Network](#)

[Rebooting Your Phone](#)

[Resetting to Factory Settings](#)

[Updating the Phone Configuration](#)

[Clearing User's Personalized Configuration Settings](#)

Warnings

When some issues occur on your phone, a warning icon appears in the status bar.

The following lists the detailed situations:

- The default password is being used
- Failed to register the account
- Provisioning credentials are wrong
- Network is unavailable

Topics

[Investigating Warnings](#)

[Re-provisioning Your Phone](#)

[Clearing Warnings](#)

Related Topic

[Changing the Administrator Password](#)

Investigating Warnings

The warning icon lets you know that your phone has one or more important issues. You can view details about warnings on the **Status** screen.

Procedure

1. Go to **Menu > Status**.
2. Select **Warnings**.

*The **Warnings** screen is displayed listing any issues.*

Tip: You can also press the **OK** key when the phone is idle, and then select **Warnings**.

Re-provisioning Your Phone

When the provisioning credentials are wrong, you need to ask your system administrator for the valid provisioning credentials to re-provision your phone.

Procedure

1. Go to **Menu > Status > Warnings**.
2. Select **Auto-p credentials failed > Re Provision**.
3. Enter valid provisioning credentials, and select **Save**.

The phone prompts you to provision now or not.

4. Select **OK**.

Clearing Warnings

You can temporarily remove the warning icon from the status bar.

However, the warning icon appears again after the phone reboots or the phone has a new warning if the issue is not solved.

Procedure

1. Go to **Menu > Status > Warnings**.
2. Select **Clear Icon**.

Diagnosing the Network

When network problems occur on your phone, you can use the "ping" or "trace route" method to troubleshoot network connectivity problems.

Procedure

1. Go to **Menu > Features > Diagnostics > Network**.
2. Do one of the following:
 - Select **Ping**, then enter the desired IP address or URL in the **Ping IP or URL** field.
 - Select **Trace Route**, then enter the desired IP address or URL in the **Trace Route IP or URL** field.
3. Select **Start**.

The screen displays the network status information.

Rebooting Your Phone

The improper operation may cause malfunction. If the malfunction occurs, your system administrator may ask you to reboot your phone.

Procedure

1. Go to **Menu > Settings > Basic Settings > Reboot**.
On the T33P/T33G phones, go to **Menu > Basic > Reboot**.
The phone prompts you to reboot the phone or not.
2. Select **OK**.

Tip: You can also long press the Cancel key on the keypad when the phone is idle to reboot the phone.

Resetting to Factory Settings

When some issues occur on your phone and you have tried all troubleshooting suggestions but still do not solve the problem, you can reset your phone to factory configurations.

This operation will delete all your personal configuration settings, and reset all settings to the factory defaults. Check with your system administrator if the personalized settings are kept before resetting your phone to factory settings.

Procedure

1. Go to **Menu > Settings > Advanced Settings** (default password: admin) > **Reset Config**.
On the T33P/T33G phones, go to **Menu > Advanced** (default password: admin) > **Reset Config**.
2. Select **Reset to Factory Settings > Reset**.
The phone prompts you to reset the setting or not.
3. Select **OK**.

The phone begins resetting.

Tip: You can also long press the OK key when the phone is idle.

After reset, the screen prompts “Welcome Initializing...Please wait”.

The phone will be reset successfully after startup.

Note: Reset of your phone may take a few minutes. Do not power off until the phone has started up successfully.

Updating the Phone Configuration

Your system administrator may ask you to update the configuration for your phone to apply any changes to system settings, which you can do without restarting it.

Procedure

1. Go to **Menu > Settings > Basic Settings > Update Configuration**.

On the T33P/T33G phones, go to **Menu > Basic > Update Configuration**.

A message is displayed on the phone screen:

2. Select **OK**.

Tip: You can also long press the REDIAL key when the phone is idle to update the phone configuration.

Clearing User's Personalized Configuration Settings

You can clear the personalized configuration settings manually on the phone.

Before You Begin

Your system administrator has enabled the phone to keep the user's personalized settings after auto provisioning.

Procedure

1. Go to **Menu > Settings > Basic Settings > Reset local settings**.


On the T33P/T33G phones, go to **Menu > Basic > Reset local settings**.

The phone prompts you to reset the local settings or not.

2. Select **OK**.

Appendix - Menu Structure

For the T33P/T33G Phone

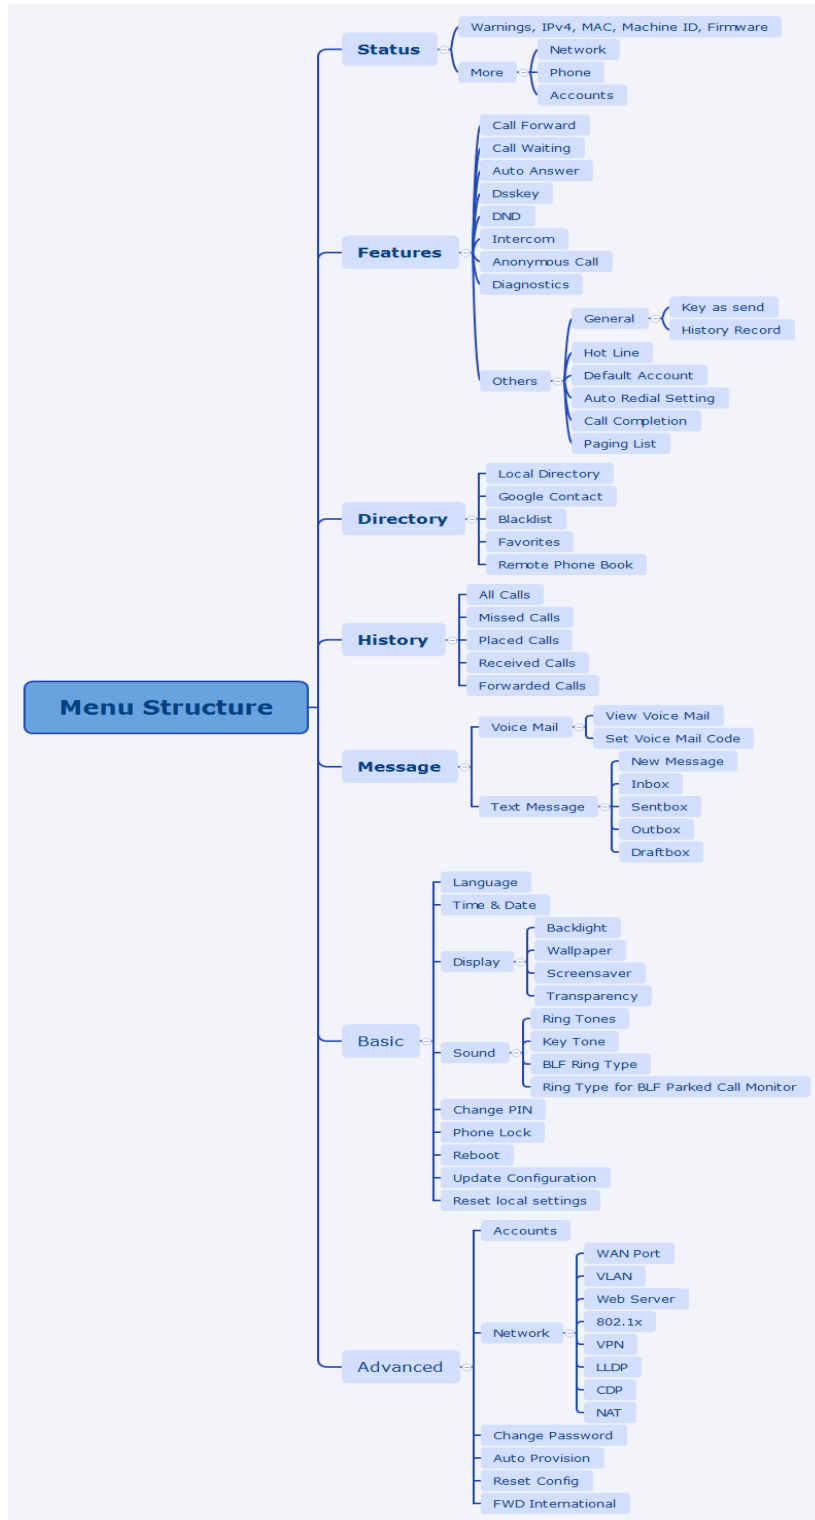

For the T31P/T31G/T31/T30P/T30 Phone

